Operating instructions

DULCO®flex DFCa
Peristaltic Pump

EN

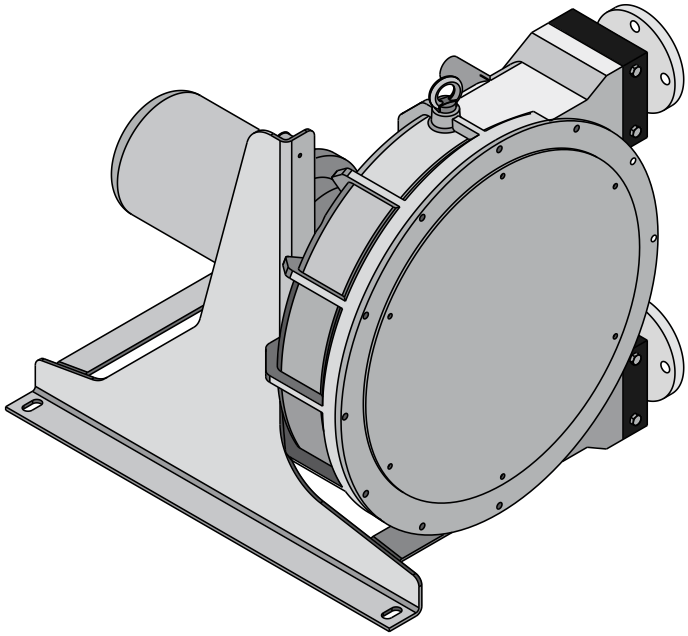

A0374

Please carefully read these operating instructions before use. · Do not discard.
The operator shall be liable for any damage caused by installation or operating errors.
The latest version of the operating instructions are available on our homepage.

General non-discriminatory approach

In order to make it easier to read, this document uses the male form in grammatical structures but with an implied neutral sense. It is aimed equally at both men and women. We kindly ask female readers for their understanding in this simplification of the text.

Supplementary information

Please read the supplementary information in its entirety.

Information

This provides important information relating to the correct operation of the unit or is intended to make your work easier.

Safety Information

The safety information includes detailed descriptions of the hazardous situation, see ↳ *Chapter 1.1 'Explanation of the safety information' on page 4*

The following symbols are used to highlight instructions, links, lists, results and other elements in this document:

More symbols

Symbol	Description
1. ▶	Action, step by step
⇨	Outcome of an action
↳	Links to elements or sections of these instructions or other applicable documents
■	List without set order
[Button]	Display element (e.g. indicators) Operating element (e.g. button, switch)
'Display /GUI'	Screen elements (e.g. buttons, assignment of function keys)
`CODE`	Presentation of software elements and/or texts

Table of contents

1 Introduction ... 4
1.1 Explanation of the safety information ... 4
1.2 Users' qualifications ... 5
1.3 Identity Code for DULCO®flex DFCa 030 ... 7
1.4 Identity Code for DULCO®flex DFCa 040 ... 9
1.5 Identity Code for DULCO®flex DFCa 050 ... 11
1.6 Identity Code for DULCO®flex DFCa 060 ... 13
1.7 Identity Code for DULCO®flex DFCa 070 ... 15
2 Safety and responsibility ... 17
2.1 General safety information ... 17
3 Functional description ... 20
3.1 Construction ... 20
3.2 Overview of the Device ... 21
4 Transport, storage, assembly and Installation ... 22
4.1 Transport ... 22
4.2 Storage ... 22
4.3 Assembly ... 22
4.3.1 Ambient conditions ... 23
4.3.2 Alignment of the suction side ... 23
4.3.3 Alignment of the discharge side ... 24
4.3.4 Adjusting the roller pressure ... 24
4.3.5 Performance curves ... 27
5 Commissioning ... 30
5.1 Testing prior to commissioning the pump ... 30
6 Operation of the peristaltic pump ... 31
7 Maintenance, repair, malfunctions, disposal and spare parts ... 32
7.1 Maintenance ... 32
7.2 Exchanging the pump hoses ... 32
7.3 Troubleshooting ... 33
7.4 Disposal of Used Parts ... 35
7.5 Spare parts ... 36
8 DFCa technical data ... 47
8.1 Dimensions DFCa 030 ... 47
8.2 Dimensions DFCa 040 ... 48
8.3 Dimensions DFCa 050 ... 49
8.4 Dimensions DFCa 060 ... 50
8.5 Dimensions DFCa 070 ... 51
9 DFCa technical appendices ... 52
9.1 EC Declaration of Conformity for Machinery ... 52
10 Index ... 53

1 Introduction

These operating instructions provide information on the technical data and functions of the DULCO®flex peristaltic pump product range DFCa.

1.1 Explanation of the safety information

Introduction

These operating instructions provide information on the technical data and functions of the product. These operating instructions provide detailed safety information and are provided as clear step-by-step instructions.

The safety information and notes are categorised according to the following scheme. A number of different symbols are used to denote different situations. The symbols shown here serve only as examples.

DANGER!

Nature and source of the danger

Consequence: Fatal or very serious injuries.

Measure to be taken to avoid this danger

Danger!

– Denotes an immediate threatening danger. If this is disregarded, it will result in fatal or very serious injuries.

WARNING!

Nature and source of the danger

Possible consequence: Fatal or very serious injuries.

Measure to be taken to avoid this danger

Warning!

– Denotes a possibly hazardous situation. If this is disregarded, it could result in fatal or very serious injuries.

CAUTION!

Nature and source of the danger

Possible consequence: Slight or minor injuries, material damage.

Measure to be taken to avoid this danger

Caution!

– Denotes a possibly hazardous situation. If this is disregarded, it could result in slight or minor injuries. May also be used as a warning about material damage.

NOTICE!

Nature and source of the danger

Damage to the product or its surroundings

Measure to be taken to avoid this danger

Note!

– Denotes a possibly damaging situation. If this is disregarded, the product or an object in its vicinity could be damaged.

Type of information

Hints on use and additional information

Source of the information, additional measures

Information!

– *Denotes hints on use and other useful information. It does not indicate a hazardous or damaging situation.*

1.2 Users' qualifications

WARNING!

Danger of injury with inadequately qualified personnel!

The operator of the plant / device is responsible for ensuring that the qualifications are fulfilled.

If inadequately qualified personnel work on the unit or loiter in the hazard zone of the unit, this could result in dangers that could cause serious injuries and material damage.

– All work on the unit should therefore only be conducted by qualified personnel.
– Unqualified personnel should be kept away from the hazard zone

Training	Definition
Instructed personnel	An instructed person is deemed to be a person who has been instructed and, if required, trained in the tasks assigned to him/her and possible dangers that could result from improper behaviour, as well as having been instructed in the required protective equipment and protective measures.
Trained user	A trained user is a person who fulfils the requirements made of an instructed person and who has also received additional training specific to the system from ProMinent or another authorised distribution partner.
Trained qualified personnel	A qualified employee is deemed to be a person who is able to assess the tasks assigned to him and recognize possible hazards based on his/her training, knowledge and experience, as well as knowledge of pertinent regulations. The assessment of a person's technical training can also be based on several years of work in the relevant field.

Training	Definition
Electrician	Electricians are deemed to be people, who are able to complete work on electrical systems and recognize and avoid possible hazards independently based on his/her technical training and experience, as well as knowledge of pertinent standards and regulations. Electricians should be specifically trained for the working environment in which the are employed and know the relevant standards and regulations. Electricians must comply with the provisions of the applicable statutory directives on accident prevention.
Customer Service department	Customer Service department refers to service technicians, who have received proven training and have been authorised by ProMinent to work on the system.

Note for the system operator

The pertinent accident prevention regulations, as well as all other generally acknowledged safety regulations, must be adhered to!

1.3 Identity Code for DULCO®flex DFCa 030

Identity code						
DFCa	DULCO®flex DFCa 030					
		Type				
	030	DFCa 030, 0.433 l/revolution				
			Power end/drive			
		000	Pump without power end/drive			
			Reduction gear system / 3 x 230 / 400 VAC			
		A11	0.25 kW, 18 rpm, 468 l/h, 4 bar			
		A12	0.37 kW, 29 rpm, 753 l/h, 4 bar			
		A13	0.55 kW, 38 rpm, 987 l/h, 4 bar			
		A14	0.55 kW, 55 rpm, 1429 l/h, 2 bar			
			Gear motor with integrated frequency converter / 1x 230 VAC			
		A31	0.55 kW, 11 ... 39 rpm, 286 ... 1013 l/h, 20 ... 70 Hz, 4 bar			
		A32	0.75 kW, 18 ... 63 rpm, 468 ... 1637 l/h, 20 ... 70 Hz, 2 bar			
			Gear motor (external frequency converter required) / 3 x 230 / 400 VAC			
		A41	0.37 kW, 2 ... 28 rpm, 52 ... 727 l/h, 3 ... 50 Hz, 4 bar			
		A42	0.75 kW, 3 ... 59 rpm, 78 ... 1533 l/h, 3 ... 65 Hz, 2 bar			
				Hose material		
			0	NR		
			B	NBR		
			E	EPDM		
			R	NR-A		
			A	NBR-A		
			H	Hypalon®		
					Hydraulic connector	
				A	VA BSP 1 1/4"	
				B	VA NPT 1 1/4"	
				C	PP BSP 1 1/4"	
				D	PVDF/PTFE BSP, 1 1/4"	
				F	PVC NPT 1 1/4"	
				G	Tri-Clamp, VA, 1 1/2"	
				H	DIN 11851, VA, NW32	
				I	DIN flange VA DN32	
				L	ANSI flange, VA, 1 1/4"	
				P	ANSI flange, PVC, 1 1/4"	
						Base plate
					0	Base plate, lacquered steel

Identity code												
DFCa	DULCO®flex DFCa 030											
					1	Base plate, stainless steel						
					2	Portable unit + lacquered steel base plate						
					3	Portable unit + stainless steel base plate						
							Leakage sensor					
						0	without leakage sensor					
						L	with leakage sensor					
						M	with leakage sensor and relay output					
								Rotor				
							0	Rotor with 2 rollers				
									Batch control			
								0	No batch control			
								C	With batch control			
										Special version		
									0	Standard		
									H	Housing Halar® coated		
											Vacuum system	
										0	none	
										V	with vacuum system	
												Approvals
											01	CE mark
											02	CE + EU 1935/2004

1.4 Identity Code for DULCO®flex DFCa 040

Identity code						
DFCa	DULCO®flex DFCa 040					
		Type				
	040	DFCa 040, 0.86 l/revolution				
			Power end/drive			
		000	Pump without power end/drive			
			Reduction gear system / 3 x 230 / 400 VAC			
		B11	0.55 kW, 18 rpm, 928 l/h, 4 bar			
		B12	0.55 kW, 29 rpm, 1495 l/h, 4 bar			
		B13	0.75 kW, 38 rpm, 1960 l/h, 4 bar			
		B14	1.10 kW, 54 rpm, 2786 l/h, 2 bar			
			Gear motor with integrated frequency converter / 1x 230 VAC			
		B31	1.10 kW, 12 ... 36 rpm, 619 ... 1857 l/h, 20 ... 70 Hz, 4 bar			
		B32	1.50 kW, 15 ... 53 rpm, 774 ... 2735 l/h, 20 ... 70 Hz, 2 bar			
			Gear motor (external frequency converter required) / 3 x 230 / 400 VAC			
		B41	1.10 kW, 2 ... 49 rpm, 103 ... 2528 l/h, 3 ... 65 Hz, 2 bar			
		B42	1.50 kW, 3 ... 53 rpm, 154 ... 2735 l/h, 3 ... 65 Hz, 2 bar			
				Hose material		
				0	NR	
				B	NBR	
				E	EPDM	
				R	NR-A	
				A	NBR-A	
				N	Norprene® (max. 2 bar)	
					Hydraulic connector	
					A	VA BSP 1 1/2"
					B	VA NPT 1 1/2"
					C	PP BSP 1 1/2"
					D	PVDF/PTFE BSP, 1 1/2"
					G	Tri-Clamp, VA, 1 1/2"
					H	DIN 11851, VA, NW40
					I	DIN flange VA DN40
					L	ANSI flange, VA, 1 1/2"
					P	ANSI flange, PVC, 1 1/2"
						Base plate
					0	Base plate, lacquered steel
					1	Base plate, stainless steel

Identity code												
DFCa	DULCO®flex DFCa 040											
					2	Portable unit + lacquered steel base plate						
					3	Portable unit + stainless steel base plate						
							Leakage sensor					
						0	without leakage sensor					
						L	with leakage sensor					
						M	with leakage sensor and relay output					
								Rotor				
							0	Rotor with 2 rollers				
									Batch control			
								0	No batch control			
								C	With batch control			
										Special version		
									0	Standard		
									H	Housing Halar® coated		
											Vacuum system	
										0	none	
										V	with vacuum system	
												Approvals
											01	CE mark
											02	CE + EU 1935/2004

1.5 Identity Code for DULCO®flex DFCa 050

Identity code							
DFCa	DULCO®flex DFCa 050						
		Type					
	050	DFCa 050, 1.47 l/revolution					
			Power end/drive				
		000	Pump without power end/drive				
			Reduction gear system / 3 x 230 / 400 VAC				
		C11	0.55 kW, 14 rpm, 1235 l/h, 4 bar				
		C12	0.75 kW, 21 rpm, 1852 l/h, 4 bar				
		C13	1.10 kW, 30 rpm, 2646 l/h, 4 bar				
		C14	1.50 kW, 38 rpm, 3352 l/h, 4 bar				
		C15	1.50 kW, 48 rpm, 4234 l/h, 2 bar				
		C16	2.20 kW, 58 rpm, 5116 l/h, 2 bar				
			Gear motor with integrated frequency converter / 1x 230 VAC				
		C31	1.50 kW, 8 ... 29 rpm, 706 ... 2558 l/h, 20 ... 70 Hz, 4 bar				
		C32	2.20 kW, 17 ... 60 rpm, 1499 ... 5292 l/h, 20 ... 70 Hz, 2 bar				
			Gear motor (external frequency converter required) / 3 x 230 / 400 VAC				
		C41	1.50 kW, 1 ... 27 rpm, 88 ... 2381 l/h, 3 ... 65 Hz, 4 bar				
		C42	2.20 kW, 3 ... 55 rpm, 265 ... 4851 l/h, 3 ... 65 Hz, 2 bar				
				Hose material			
				0	NR		
				B	NBR		
				E	EPDM		
				R	NR-A		
				A	NBR-A		
				N	Norprene®		
						Hydraulic connector	
					I	DIN flange VA DN40	
					G	Tri-clamp, VA, 2"	
					H	DIN 11851, VA, NW50	
					J	DIN flange PP DN40	
					K	DIN flange, PVDF/PTFE DN40	
					L	ANSI flange, VA, 1 1/2"	
					M	ANSI flange, PP, 1 1/2"	
					N	ANSI flange, PVDF/PTFE, 1 1/2"	
							Base plate
						0	Base plate, lacquered steel

Identity code												
DFCa	DULCO®flex DFCa 050											
					1	Base plate, stainless steel						
					2	Portable unit + lacquered steel base plate						
					3	Portable unit + stainless steel base plate						
							Leakage sensor					
						0	without leakage sensor					
						L	with leakage sensor					
						M	with leakage sensor and relay output					
								Rotor				
							0	Rotor with 2 rollers				
									Batch control			
								0	No batch control			
										Special version		
									0	Standard		
									H	Housing Halar® coated		
											Vacuum system	
										0	none	
										V	with vacuum system	
												Approvals
											01	CE mark
											02	CE + EU 1935/2004

1.6 Identity Code for DULCO®flex DFCa 060

Identity code						
DFCa	DULCO®flex DFCa 060					
		Type				
	060	DFCa 060, 3.16 l/revolution				
			Power end/drive			
		000	Pump without power end/drive			
			Reduction gear system / 3 x 230 / 400 VAC			
		D11	2.20 kW, 18 rpm, 3.4 m^3/h, 4 bar			
		D12	2.20 kW, 22 rpm, 4.2 m^3/h, 4 bar			
		D13	3.00 kW, 27 rpm, 5.1 m^3/h, 4 bar			
		D14	3.00 kW, 33 rpm, 6.3 m^3/h, 4 bar			
		D15	3.00 kW, 42 rpm, 8.0 m^3/h, 4 bar			
		D16	3.00 kW, 47 rpm, 8.9 m^3/h, 2 bar			
			Gear motor with integrated frequency converter / 1x 400 VAC			
		D31	3.0 kW, 7 ... 25 rpm, 0.2 ... 4.5 m^3/h, 4 bar			
		D32	4.0 kW, 7 ... 59 rpm, 3.2 ... 11.2 m^3/h, 2 bar			
			Gear motor, 3 x 230/400 VAC, external frequency converter required			
		D41	3.00 kW, 1 ...24 1/min, 0.2 ... 4.5 m^3/h, 4 bar			
		D42	3.00 kW, 2 ... 55 rpm, 0.4 ... 10.4 m^3/h, 2 bar			
				Hose material		
				0	NR	
				B	NBR	
				E	EPDM	
				R	NR-A	
				A	NBR-A	
				N	Norprene®	
					Hydraulic connector	
				I	DIN Flange, VA, DN50	
				G	Tri-Clamp, VA, 2 1/2"	
				H	DIN 11851, VA, NW50	
				J	DIN flange, PP, DN50	
				K	DIN flange, VA, Halar® coated, DN50	
				L	ANSI flange, VA, 2"	
				M	ANSI flange, PP, 2"	
				N	ANSI flange, VA, Halar® coated, 2"	
						Base plate
					0	Base plate, lacquered steel

Identity code												
DFCa	DULCO®flex DFCa 060											
					1	Base plate, stainless steel						
					2	Portable unit + lacquered steel base plate						
					3	Portable unit + stainless steel base plate						
							Leakage sensor					
						0	without leakage sensor					
						L	with leakage sensor					
						M	with leakage sensor and relay output					
								Rotor				
							0	Rotor with 2 rollers				
									Batch control			
								0	No batch control			
										Special version		
									0	Standard		
									H	Housing Halar® coated		
											Vacuum system	
										0	none	
										V	with vacuum system	
												Approvals
											01	CE mark
											02	CE + EU 1935/2004

1.7 Identity Code for DULCO®flex DFCa 070

Identity code							
DFCa	DULCO®flex DFCa 070						
		Type					
	070	DFCa 070, 6.72 l/revolution					
			Power end/drive				
		000	Pump without power end/drive				
			Reduction gear system / 3 x 230 / 400 VAC				
		E11	2.20 kW, 13 rpm, 5.2 m^3/h, 4 bar				
		E12	3.0 kW, 22 rpm, 8.9 m^3/h, 4 bar				
		E13	4.0 kW, 26 rpm, 10.5 m^3/h, 4 bar				
		E14	4.0 kW, 32 rpm, 12.9 m^3/h, 4 bar				
		E15	5.5 kW, 37 rpm, 14.9 m^3/h, 4 bar				
		E16	5.5 kW, 46 rpm, 18.5 m^3/h, 2 bar				
			Gear motor with integrated frequency converter / 1x 400 VAC				
		E31	5.5 kW, 8 ... 27 rpm, 3.2 ... 10.9 m^3/h, 20 ... 60 Hz, 4 bar				
		E32	7.5 kW, 13 ... 38 rpm, 5.2 ... 15.3 m^3/h, 20 ... 60 Hz, 2 bar				
			Gear motor, 3 x 230/400 VAC, external frequency converter required				
		E41	5.5 kW, 1 ... 25 rpm, 0.4 ... 10.1 m^3/h, 3 ... 65 Hz, 4 bar				
		E42	7.5 kW, 2 ... 42 rpm, 0.8 ... 16.9 m^3/h, 3 ... 65 Hz, 2 bar				
				Hose material			
				0	NR		
				B	NBR		
				E	EPDM		
				R	NR-A		
				A	NBR-A		
					Hydraulic connector		
					I	DIN flange VA, DN65	
					G	Tri-Clamp, VA, 3"	
					H	DIN 11851, VA, NW65	
					J	DIN flange PP, DN65	
					L	ANSI flange, 2 1/2"	
					M	ANSI flange, PP, 2 1/2"	
					Q	DIN flange, VA, Halar® coated, DN65	
					R	ANSI flange VA Halar® coated, 2 1/2"	
						Base plate	
					0	Base plate, lacquered steel	
					1	Base plate, stainless steel	

Identity code												
DFCa	DULCO®flex DFCa 070											
					2	Portable unit + lacquered steel base plate						
					3	Portable unit + stainless steel base plate						
							Leakage sensor					
						0	without leakage sensor					
						L	with leakage sensor					
						M	with leakage sensor and relay output					
								Rotor				
							0	Rotor with 2 rollers				
									Batch control			
								0	No batch control			
										Special version		
									0	Standard		
									H	Housing Halar® coated		
											Vacuum system	
										0	none	
										V	with vacuum system	
												Approvals
											01	CE mark
											02	CE + EU 1935/2004

2 Safety and responsibility

2.1 General safety information

WARNING!

Live parts

Possible consequence: Fatal or very serious injuries

- Measure: The device must be disconnected from the power supply before it is opened
- Isolate damaged, faulty or manipulated devices from the mains in order to de-energise.

WARNING!

Emergency stop switch

Possible consequence: Fatal or very serious injuries

An emergency stop switch is to be connected for the entire plant. This should enable the entire plant to be shut down in the event on an emergency in such a way that the overall plant can be brought into a safe condition.

WARNING!

Unauthorised access

Possible consequence: Fatal or very serious injuries

- Measure: Ensure that there can be no unauthorised access to the unit

WARNING!

Hazardous media / contamination of persons and equipment

Possible consequence: Fatal or very serious injuries. material damage

- Ensure that the pump hoses are resistance against the media being conveyed
- Always observe the the safety data sheets for the media to be conveyed. The system operator must ensure that these safety data sheets are available and that they are kept up-to-date
- The safety data sheets for the media being conveyed are always decisive for initiating counter measures in the event of leakage to the media being conveyed
- Observe the general restrictions in relation to viscosity limits, chemical resistance and density
- Always switch the pump off before exchanging the pump hose

WARNING!

Correct and proper use

Possible consequence: Fatal or very serious injuries

- The unit is not intended to convey or regulate gaseous or solid media
- Do not exceed the rated pressure, speed or temperature for the pump
- The unit may only be used in accordance with the technical data and specifications provided in these operating instructions and in the operating instructions for the individual components
- The system is not designed for use in areas at risk from explosion
- Only switch the pump on if it has been properly fastened to the floor
- Only switch the pump on if it the front cover has been attached.

WARNING!

Operational lifetime of the pump hoses

Possible consequence: Fatal or very serious injuries

The operational lifetime of the pump hoses cannot be precisely specified. For this reason, the possibility of fracture and consequential leakage of liquids must be accounted for. If the hose rupture alarm (optional) is fitted, then the pump can be stopped and / or an electrical valve can be actuated.

In addition, you must avoid particles from untight hoses being introduced into the media being conveyed. This can be achieved e.g. by means of filtration, a hose rupture alarm or other means suitable for the respective process.

CAUTION!

CIP cleaning

In the event of CIP cleaning, it is necessary to obtain information from the manufacturer about correct installation of the pump (a special installation is required), as well as regarding the compatibility of the cleaning agents with the pump hoses of the pump and the other hydraulic connections.

Cleaning should be undertaken at the recommended maximum temperature.

CAUTION!

Direction of rotation / flow direction

Possible consequence: Material damage right through to destruction of the unit

- The pump's direction of rotation in relation to the desired flow direction must be checked prior to every start.

CAUTION!

Environmental influences

Possible consequence: Material damage right through to destruction of the unit

- The device is not suitable for outdoor operation
- Take suitable measures to protect the device from environmental influences such as:
  - UV rays
  - Moisture
  - Frost, etc.

3 Functional description

Brief functional description

The package contents supplied with the DULCOflex® DFCa is selectable via the identcode.

The DULCOflex® DFCa is a displacement pump. The feed chemical is transported by the rotor squeezing the hose in the direction of flow. No valves are needed for this. This ensures gentle handling of the metered media.

The DULCOflex® DFCa has been designed for safe and uncomplicated operation, as well as straightforward maintenance.

The DULCOflex® DFCa can be used for many different media. However, this pump type is often the optimal solution for abrasive, shear-sensitive and viscose media.

Typical areas of use include processes where only a low discharge pressure is required (max. 8 bar).

3.1 Construction

Main modules:

- Drive Unit
- Housing
- Base frame

The pump housing is closed off with a screwed front cover in order to avoid the risk of injury.

The motor serves to drive the rotor. Rollers at the ends of the rotor serve to press the pump hose against the pump housing.

The rotary movement of the rotors alternately press and relax the rollers in relation to the pump hose. This serves to suck the media in and convey it into the metering line.

3.2 Overview of the Device

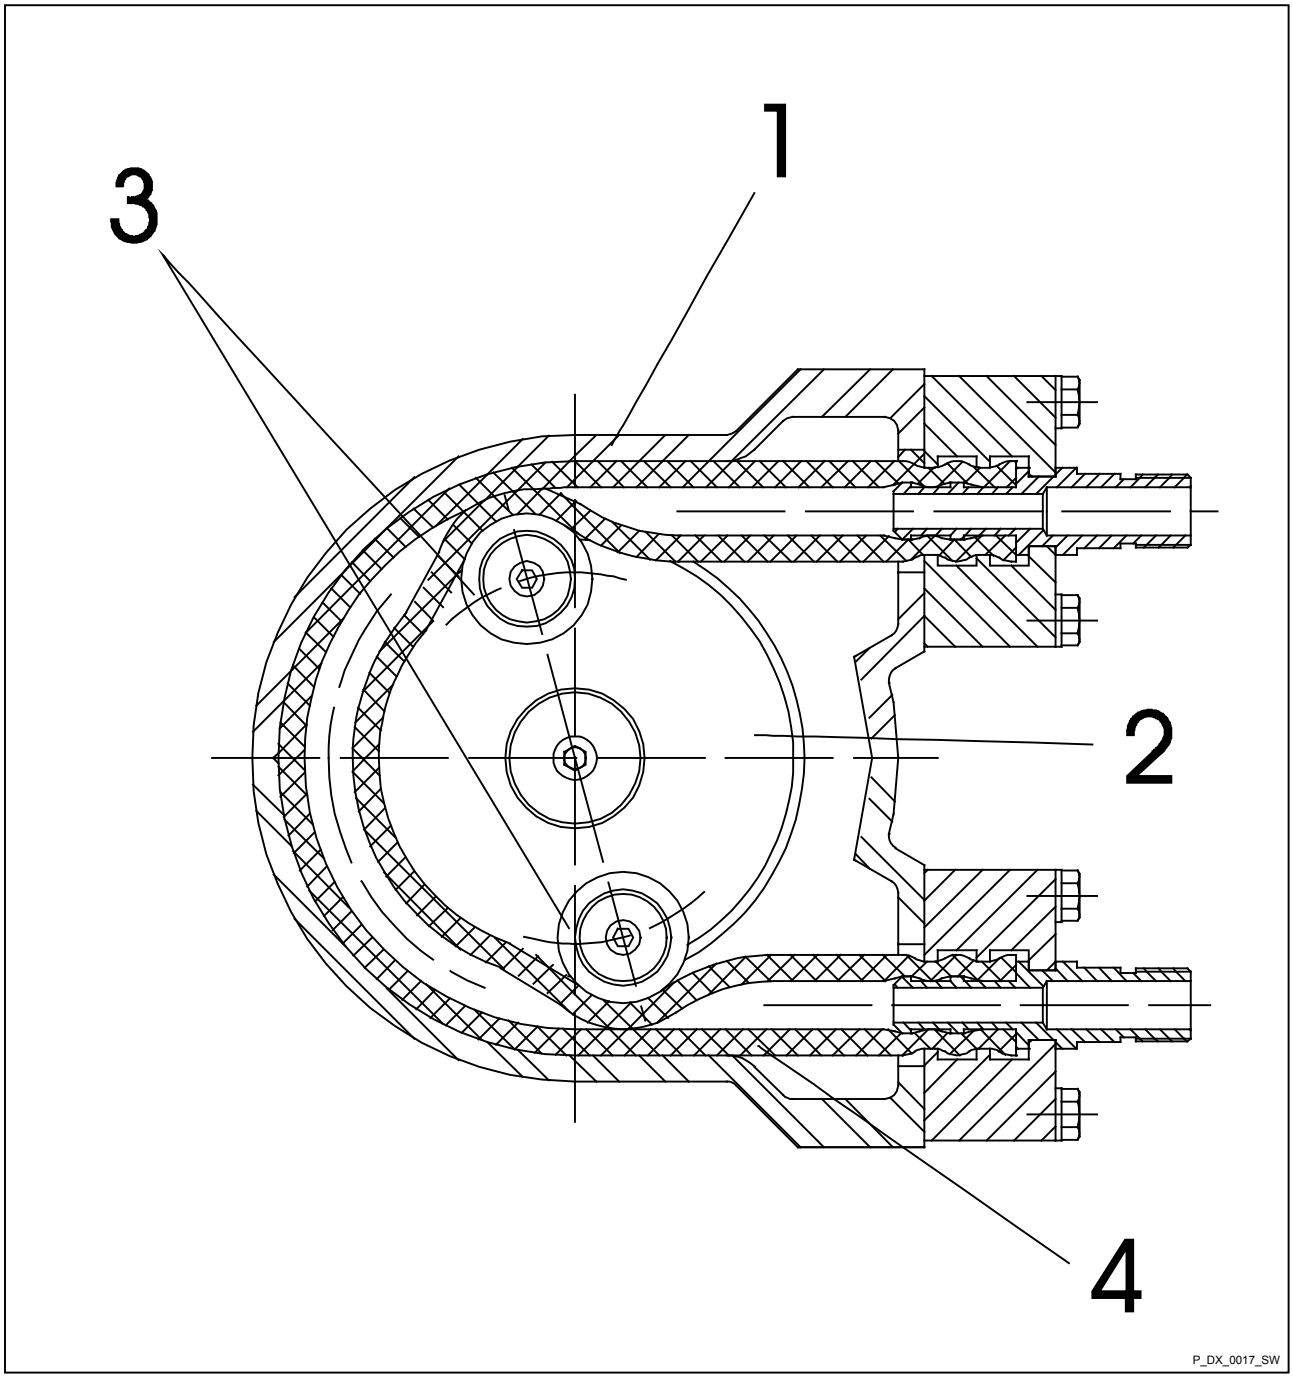

Fig. 1: Diagram of functional principle

1 Housing
2 Rotor
3 Rollers
4 Hose

4 Transport, storage, assembly and Installation

- **User qualification, transport and storage:** trained user, see *Chapter 1.2 'Users' qualifications' on page 5*
- **User qualification, installation:** trained qualified personnel, see *Chapter 1.2 'Users' qualifications' on page 5*
- **User qualification, electrical installation:** Electrical technician, see *Chapter 1.2 'Users' qualifications' on page 5*

WARNING!

Danger from hazardous substances!

Possible consequence: Fatal or very serious injuries.

Please ensure when handling hazardous substances that you have read the latest safety data sheets provided by the manufacture of the hazardous substance. The actions required are described in the safety data sheet. Check the safety data sheet regularly and replace, if necessary, as the hazard potential of a substance can be re-evaluated at any time based on new findings.

The system operator is responsible for ensuring that these safety data sheets are available and that they are kept up to date, as well as for producing an associated hazard assessment for the workstations affected.

4.1 Transport

Transport

- The pump is protected by means of cardboard packaging
- The packaging materials can be recycled
- Consider the ambient conditions

4.2 Storage

Storage

- Remove the pump hose from the housing during storage
- With storage lasting longer than 60 days, protect the coupling surfaces (terminals, reducing adaptors, motors) with appropriate antioxidant agents
- Consider the ambient conditions

4.3 Assembly

CAUTION!

Possible consequence: Slight or minor injuries. Material damage.

Carry out the assembly work before the electrical installation!

Note the permissible ambient conditions!

4.3.1 Ambient conditions

NOTICE!

Ambient conditions

Possible consequence: Damage to property and increased wear and tear

Install in the following order. If the pump is to be installed outdoors, protect it against sunlight and the influences of the weather.

When positioning the pump, ensure that there is sufficient room for access for all types of maintenance work.

There are limit values for temperature and pressure, depending on the type of hose selected. These limit values are described in the following:

Limit values for hose temperature and pressure

Material Hose	min. temp. (°C) Feed chemical	max. temp. (°C) Feed chemical	min. temp. (°C) Environment	max. pressure (bar)
NR	-20	80	-40	8
NBR	-10	80	-40	8
EPDM	-10	80	-40	8
NR-A	-10	80	-40	8
NBR-A	-10	80	-40	8
NORPRENE®	-10	120	-40	2

Also observe the general safety information, see *Chapter 2.1 'General safety information' on page 17*

4.3.2 Alignment of the suction side

The pump is to be positioned as near as possible to the liquid container, so that the suction side is kept as short and straight as possible.

The suction line must be absolutely airtight and made of a suitable material, so that it is not squeezed together under vacuum.

The diameter must correspond to the rated diameter of the pump hose. A larger diameter is recommended in the event of viscose liquids.

The pump is self-priming and does not require an admission valve. The pump is reversible and the suction connection can therefore comprise of one of two options. Normally the option is selected which is best suited to the physical conditions of the installation.

It is recommended to use a flexible transition between two fixed pipes and the hydraulic connection of the pump, in order to avoid the transmission of vibrations.

4.3.3 Alignment of the discharge side

The discharge line is to be kept as straight and short as possible, in order to avoid performance reduction.

The diameter must correspond to the rated diameter of the pump hose. Bei viskosen Flüssigkeiten wird ein größerer Durchmesser empfohlen.

It is recommended to use a flexible transition between two fixed pipes and the hydraulic connection of the pump, in order to avoid the transmission of vibrations.

4.3.4 Adjusting the roller pressure

The peristaltic pump is equipped with spacer plates (6) to adjust the precise pressure distance to the roller (9) (dependent on speed and operating pressure).

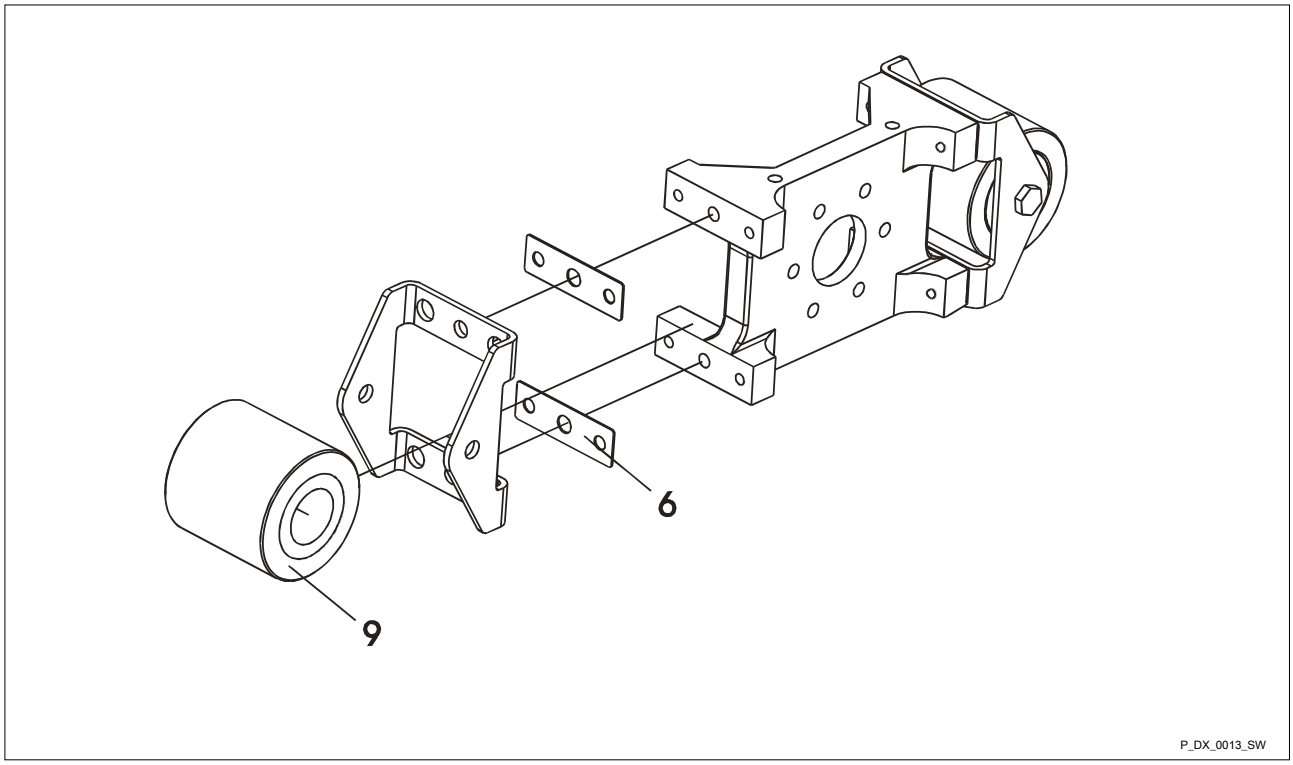

Fig. 2: Space plates / roller

6 Spacer plates
9 Roller

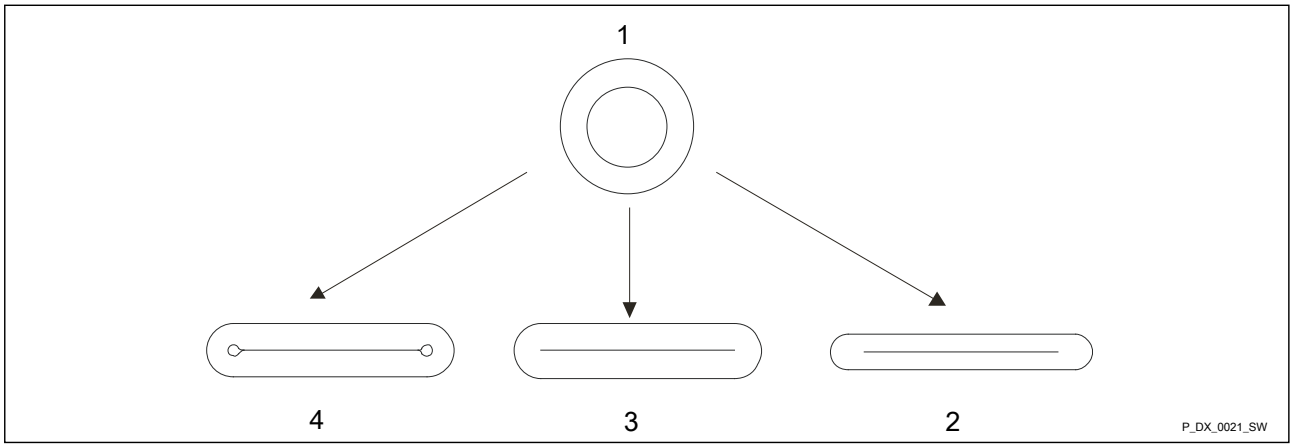

Fig. 3: Squeezing the hose

1 Normal shape of hose
2 Excessive squeezing (increased wear and tear on the pump and hose)
3 Perfect squeezing
4 Insufficient squeezing (medium backflowing in the cavity will destroy the hose within a short period of time)

The spacer plates are factory-fitted. You can adapt the number of spacer plates to the actual operating conditions in accordance with the following table.

DFCa 030 / Number of spacer plates of 0.5 mm thickness (except Norprene®):

rpm	0-19	20-39	40-59	60-79	80-99
bar					
0.5	2	2	1	1	1
2.0	2	2	2	2	2
4.0 *	3	2	2	2	2
6.0	3	3	3	2	-
8.0	4	3	3	-	-
* Delivery state					

DFCa 040 / Number of spacer plates of 1.0 mm thickness (except Norprene®):

rpm	0-19	20-39	40-59	60-79	80-99
bar					
0.5	4	4	4	4	3
2.0	5	4	4	4	4
4.0 *	5	5	5	4	4
* Delivery state					

rpm	0-19	20-39	40-59	60-79	80-99
bar					
6.0	6	5	5	-	-
8.0	6	6	-	-	-
* Delivery state					

DFCa 040 / Number of spacer plates of 1.0 mm thickness (except Norprene®):

rpm	0-19	20-39	40-59	60-79	80-99
bar					
0.5	14	14	14	14	14
2.0*	14	14	14	14	14
* Delivery state					

DFCa 050 / Number of spacer plates of 1.0 mm thickness:

rpm	0-19	20-39	40-59	60-79	80-99
bar					
0.5	1	1	1	0	0
2.0	2	1	1	1	1
4.0 *	2	2	2	2	2
6.0	3	3	3	3	-
8.0	4	3	-	-	-
* Delivery state					

DFCa 060 / Number of spacer plates of 1.0 mm thickness:

rpm	0-19	20-39	40-59	60-79	80-99
bar					
0.5	6	5	5	5	5
2.0	6	6	6	6	5
4.0 *	6	6	6	6	6
6.0	7	6	6	6	6
8.0	7	7	7	7	-
* Delivery state					

DFCa 070 / Number of spacer plates of 1.0 mm thickness:

rpm	0-19	20-39	40-59	60-79	80-99
bar					
0.5	1	1	0	0	0
2.0	1	1	1	0	0
4.0 *	2	2	2	1	1
6.0	3	3	2	-	-
8.0	4	3	3	-	-
* Delivery state					

4.3.5 Performance curves

NOTICE!

Maximum pressure under continuous operation

The dotted line indicates the limit for maximum pressure under continuous operation

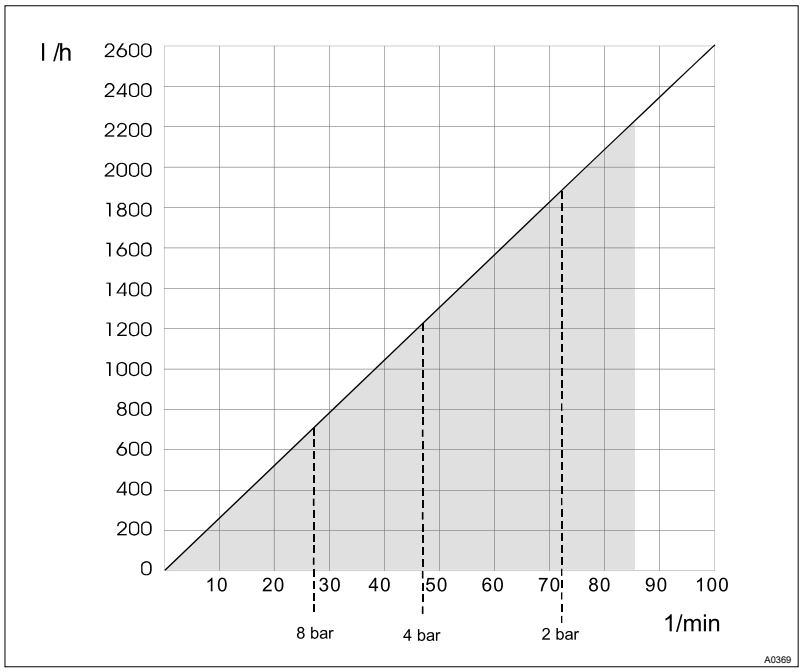

Fig. 4: DFCa 030

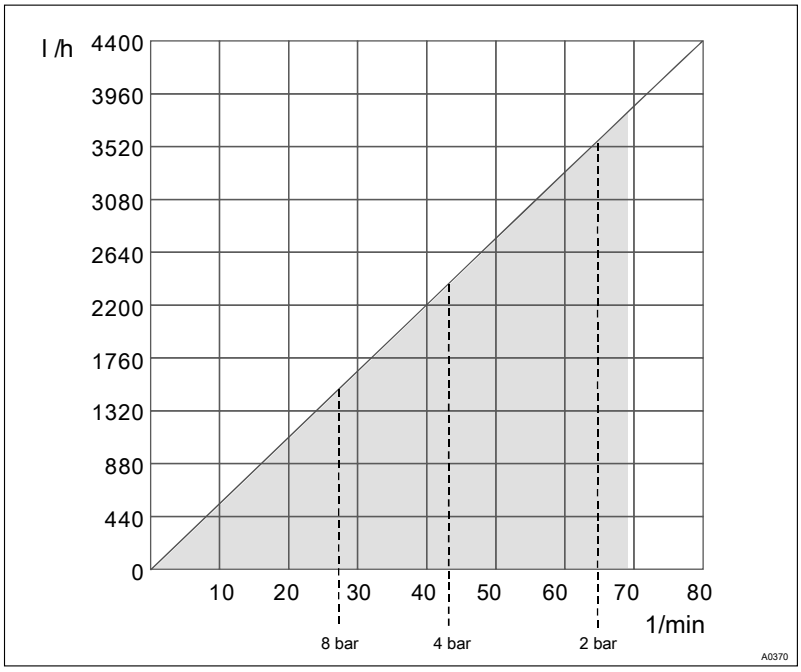

Fig. 5: DFCa 040

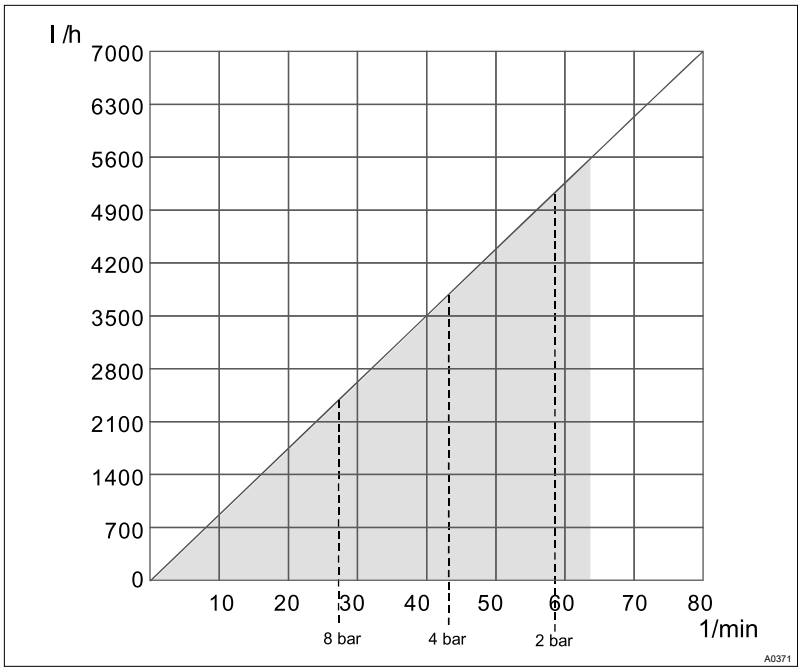

Fig. 6: DFCa 050

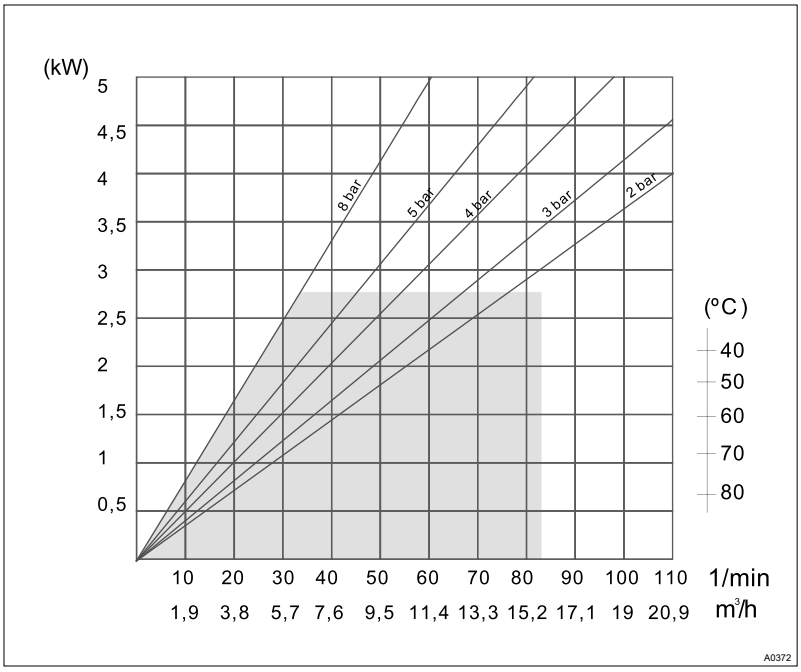

Fig. 7: DFCa 060

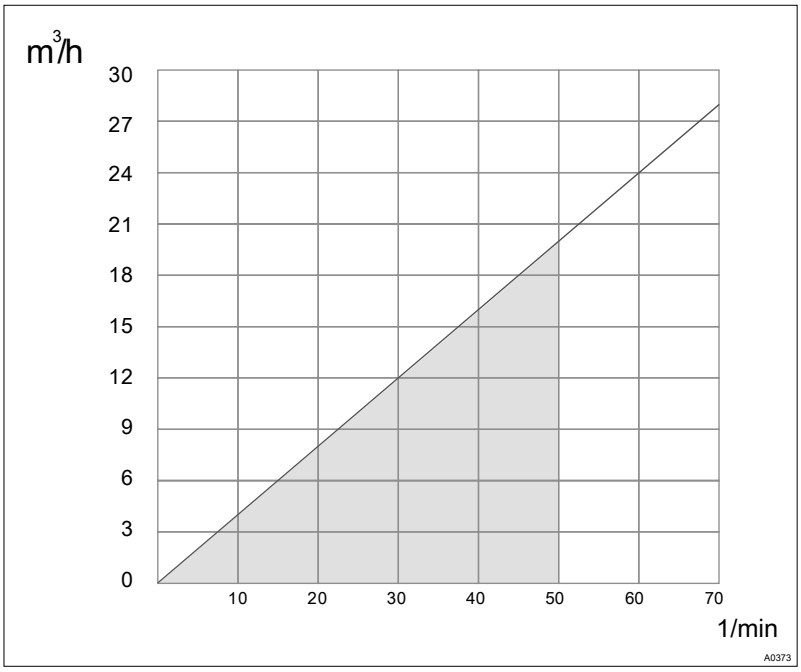

Fig. 8: DFCa 070

5 Commissioning

- **User qualification, commissioning:** trained user, see *Chapter 1.2 'Users' qualifications' on page 5*

5.1 Testing prior to commissioning the pump

The following tests are to be carried out:

- Ensure that the pump has not been damaged during transportation or storage. Immediately report any damage to the supplier
- Check that the mains voltage is suitable for the motor
- Ensure that the hose is suitable for the fluid to be conveyed and that it is not damaged
- Make sure that the temperature of the liquid does not exceed the recommended temperature range
- Only switch the pump on if it the front cover has been properly attached
- Check that the rollers are correctly fitted and fastened
- Check that the hose and rollers are sufficiently lubricated
- Check that the thermal overload protection (not included in the delivery scope) corresponds to the value specified on the motor type plate
- Check whether the direction of rotation is correctly adjusted
- Check that the optional electrical components are connected and are working properly
- Install a manometer in the pressure line if the back-pressure value is unknown
- Check the operating instructions in order to ensure that the flow values, pressures and power consumption of the motor do not exceed the rated values
- Install a pressure relief valve in the pressure line in order to protect the pump in the event that a valve is unintentionally closed off or the line is blocked in another way.

6 Operation of the peristaltic pump

- **User qualification, operation:** instructed persons, see
  ↳ *Chapter 1.2 'Users' qualifications' on page 5*

The peristaltic pump is to be fully integrated into the customer's designated plant and is then controlled by this plant. It is not possible to operate the pump directly.

7 Maintenance, repair, malfunctions, disposal and spare parts

- **User qualification, maintenance and disposal:** instructed personnel, see *Chapter 1.2 'Users' qualifications' on page 5*
- **User qualification, repair and troubleshooting:** trained user, see *Chapter 1.2 'Users' qualifications' on page 5*

WARNING!
Danger from hazardous substances!
Possible consequence: Fatal or very serious injuries.

Please ensure when handling hazardous substances that you have read the latest safety data sheets provided by the manufacture of the hazardous substance. The actions required are described in the safety data sheet. Check the safety data sheet regularly and replace, if necessary, as the hazard potential of a substance can be re-evaluated at any time based on new findings.

The system operator is responsible for ensuring that these safety data sheets are available and that they are kept up to date, as well as for producing an associated hazard assessment for the workstations affected.

7.1 Maintenance

CAUTION!
Disconnect the pump from the mains
Possible consequence: Personal injury

You may only carry out work on the pump after it has previously been switched off and disconnected from the mains.

Lubrication

- Check that the rollers and the hose are sufficiently lubricated
  - Check every 200 operating hours
- Check whether the oil level is correct for the step-down gears
  - Exchange the oil at regular intervals in accordance with the step-down gear maintenance manual.

7.2 Exchanging the pump hoses

Exchanging the pump hoses - dismantling

1. Close off all valves, in order to prevent leakage of the feed chemical
2. Dismantle the pump hoses from both discharge and suction sides
3. Remove the front cover
4. Remove a roller incl. the spacer plate (the roller that is not touching the pump hose)
5. Turn the rotor with the help of the motor so that the remaining roller is not pressing against the pump hose
6. Remove the pressure flange from the pump housing

7. Remove the pump hose to be exchanged
8. Dismantle the hydraulic connections from both pump hose ends

Exchanging the pump hoses - installation

1. Clean the interior surfaces of the pump housing
2. Lubricate the internal surfaces of the pump housing at the contact surfaces to the pump hose
3. Check the rollers. Ensure that the roller surfaces are not damaged
4. Attach the hydraulic connections at both hose ends with the help of the pressure flange
5. Lay the pump hose into the pump housing
6. Lubricate the pump hose and the rollers
7. Fasten the pressure flange to the pump casing
8. Turn the rotor with the help of the motor so that the remaining roller presses against the pump hose
9. Re-attach the second roller with spacer plates back onto the rotor
10. Attach the front cover to the pump housing
11. Mount the pump hoses from both discharge and suction sides
12. Open all of the valves

7.3 Troubleshooting

Problem	Possible cause	Solution
Increased pump temperature	Pump hose has no lubricant	Lubricate pump hose
	Increased product temperature	Reduce product temperature
	Insufficient or poor suction conditions	Check suction line for blockages
	Pump speed too high	Reduce pump speed
Reduced flow or pressure	Valves on discharge and or suction side completely or partially closed	Open valves
	Pump hose insufficiently compressed	Check roller fastening
	Pump hose rupture (the product leaks out into the housing)	Exchange pump hose
	Partial blockage of the suction line	Clean pipe
	Insufficient product quantity in storage container	Fill storage container or exchange pump
	Insufficient diameter on the suction side	Increase the diameter on the suctions side, as far as possible
	Suction line too long	Shorten the suction line, as far as possible
	High viscosity of medium	Reduce viscosity, as far as possible

Problem	Possible cause	Solution
	Air introduction in the suction connections	Check connections and accessories for air tightness
Vibrations on pumps and pipelines	The pipes are not correctly fastened	Fasten pipes correctly (e.g. wall brackets)
	Pump speed too high	Reduce pump speed
	Insufficient nominal width of the pipes	Increase nominal width
	Pump base plate loose	Fasten base plate
	Pulsation dampers insufficient or missing	Install pulsation dampers on suction and / or discharge side.
Short operational lifetime of the hoses	Chemical exposure	Check the compatibility of the hose with the liquid being conveyed, the cleaning fluid and the lubricant
	High pump speed	Reduce pump speed
	High conveying temperature	Reduce product temperature
	High operating pressure	Reduce operating pressure
	Pump cavitations	Check the suction conditions
Pump hose pulled into the pump housing	High inlet pressure (> 3 bar)	Reduce inlet pressure
	Pump hose filled with deposits	Clean or replace the pump hose
	Holder (pressure flange) insufficiently tightened	Re-tighten holder (pressure flange)
The pump does not start up	Insufficient motor performance	Check motor and replace if necessary
	Insufficient output from frequency converter	The frequency converter must match the motor
		Check voltage. Start occurs at minimum 10 Hz
	Blockage in the pump	Check if the suction or discharge side is blocked. Rectify blockage

7.4 Disposal of Used Parts

WARNING!

Danger from hazardous substances!

Possible consequence: Fatal or very serious injuries.

Please ensure when handling hazardous substances that you have read the latest safety data sheets provided by the manufacture of the hazardous substance. The actions required are described in the safety data sheet. Check the safety data sheet regularly and replace, if necessary, as the hazard potential of a substance can be re-evaluated at any time based on new findings.

The system operator is responsible for ensuring that these safety data sheets are available and that they are kept up to date, as well as for producing an associated hazard assessment for the workstations affected.

WARNING!

Danger from feed chemicals

Possible consequence: Fatal or serious injuries

In the event that damage to the pump hose contaminates the pump with the feed chemical, decontaminate it with suitable agents (refer to the material safety data sheet for the feed chemical).

NOTICE!

The used part can only be accepted with a completed Declaration of Decontamination

(also available as a download: www.prominent.com)

A signed "Declaration of Decontamination" is required by law and in order to protect our staff, before your order can be processed.

Ensure that it is attached to the outside of the package. Otherwise we are unable to accept your delivery.

NOTICE!

Regulations governing the disposal of used parts

– Note the national regulations and legal standards that currently apply in your country

Remove and dispose of the pump hose on site before returning the pump to ProMinent Dosiertechnik GmbH, Heidelberg/Germany.

ProMinent GmbH, Heidelberg//Germany will take back clean used parts.

7.5 Spare parts

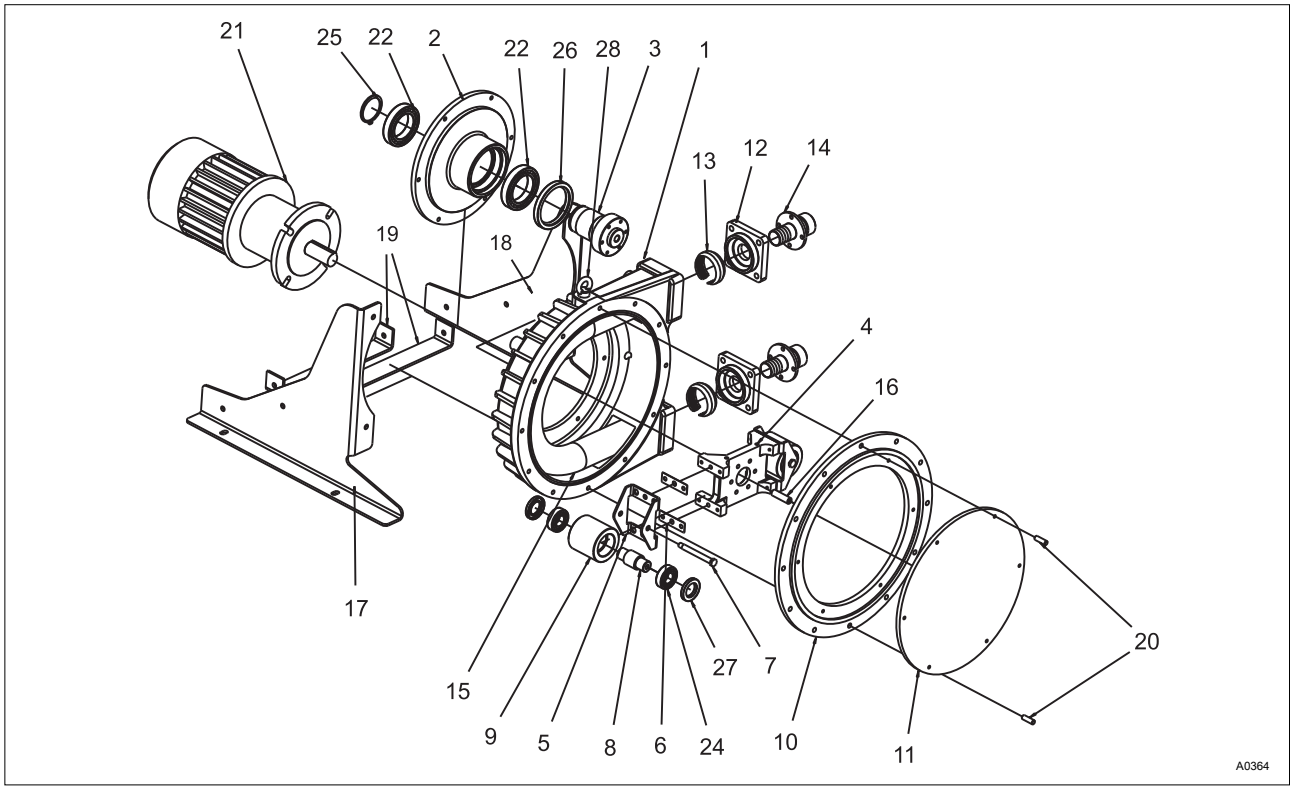

Fig. 9: Exploded view of spare parts for DFCa 30

DFCa 030 see Fig. 9				
Item	**Description**	**Quantity**	**Reference**	**Part number**
1	Pump housing	1	107.00.01	
2	Ball bearing housing	1	107.00.03	
3	Rotor shaft	1	107.00.04	
4	Rotor	1	107.00.05	
5	Roller holder	2	107.00.06	
6	Spacer plate		107.00.07	
7	Headless screw	2	107.00.08	
8	Roller shaft	2	107.00.09	
9	Roller	2	107.00.11	
10	Metal cover	1	107.00.13	
11	Front cover (polycarbonate)	1	107.00.14	
12	Pressure flange, standard	2	107.00.15	
13	Press ring	2	100.00.05	
14	Connector VA 1 1/4" BSP	2	107.00.17	
	Connector VA 1 1/4" NPT	2	107.00.34	
	Connector DIN 11851 NW32	2	107.00.35	

DFCa 030 see Fig. 9				
Item	**Description**	**Quantity**	**Reference**	**Part number**
	Connector TRI-CLAMP	2	107.00.36	
	Connector DIN DN32 VA	2	107.00.37	
	Connector ANSI DN32 VA	2	107.00.38	
	Connector PP 1 1/4" BSP	2	107.00.39	
15	Pump hose NR	1	107.00.18	1037183
	Pump hose NR-A	1	107.00.19	1037186
	Pump hose NBR	1	107.00.20	1037184
	Pump hose NBR-A	1	107.00.21	1037187
	Pump hose EPDM	1	107.00.22	1037185
	Pump hose NORPRENE®	1	107.00.54	1045073
16	Cap	1	110.00.23	
17	Base plate, left	1	100.01.24	
	Base plate, left, stainless steel	1	100.01.34	
18	Base plate, right	1	100.01.25	
	Base plate, right, stainless steel	1	100.01.35	
19	Base plate, centre	2	100.01.26	
	Base plate, centre, stainless steel	2	100.01.36	
20	Stud bolts	2	102.00.14	
21	Power end/drive	1		
22	Ball bearing	2	100.01.28	
24	Ball bearing	4	107.00.30	
25	Rotor washer	1	100.01.31	
26	Seal	1	100.01.32	
27	Seal	4	107.00.33	
28	Lifting lug	1	106.00.40	
29	Discharge screw	3	107.00.41	

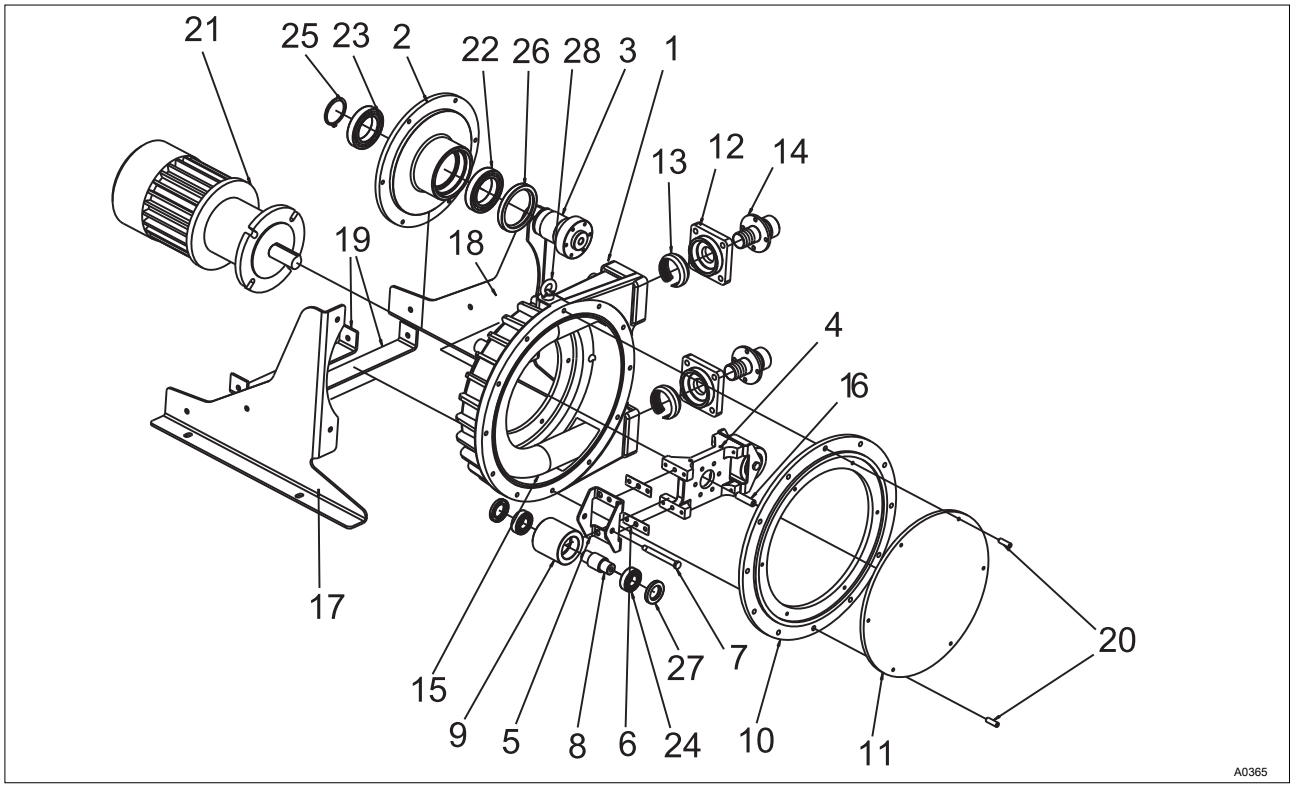

Fig. 10: Exploded view of spare parts for DFCa 40

DFCa 040 see Fig. 10				
Item	**Description**	**Quantity**	**Reference**	**Part number**
1	Pump housing	1	106.00.01	
2	Ball bearing housing	1	106.00.03	
3	Rotor shaft	1	106.00.04	
4	Rotor	1	106.00.05	
5	Roller holder	2	106.00.06	
6	Spacer plate 1 mm		106.00.07	
	Spacer plate 4 mm		106.00.49	
7	Headless screw	2	106.00.08	
8	Roller shaft	2	106.00.09	
9	Roller	2	106.00.11	
10	Metal cover	1	106.00.13	
	Metal cover (vacuum design)		106.00.43	
11	Front cover (polycarbonate)	1	106.00.14	
12	Pressure flange, standard	2	106.00.15	
13	Press ring	2	104.00.05	
	Pressure ring for NORPRENE®	2	106.00.51	
14	Connector VA 1 1/2" BSP	2	106.00.17	

DFCa 040 see Fig. 10				
Item	**Description**	**Quantity**	**Reference**	**Part number**
	Connector VA 1 1/2" NPT	2	106.00.34	
	Connector DIN 11851 NW40	2	106.00.35	
	Connector TRI-CLAMP	2	106.00.36	
	Connector DIN DN40 VA	2	106.00.37	
	Connector ANSI DN40 VA	2	106.00.38	
	Connector PP 1 1/2" BSP	2	106.00.39	
	Connector PVDF 1 1/2" BSP	2	106.00.41	
	Connector PP 1 1/2" NPT	2	106.00.47	
	Connector SMS-38	2	106.00.42	
15	Pump hose NR	1	106.00.18	1037192
	Pump hose NR-A	1	106.00.19	1037195
	Pump hose NBR	1	106.00.20	1037193
	Pump hose NBR-A	1	106.00.21	1037196
	Pump hose EPDM	1	106.00.22	1037194
	Pump hose NORPRENE®	1	106.00.50	1037198
16	Cap	1	110.00.23	
17	Base plate, left	1	106.00.24	
	Base plate, left, stainless steel	1	106.00.44	
18	Base plate, right	1	106.00.25	
	Base plate, right, stainless steel	1	106.00.45	
19	Base plate, centre	2	106.00.26	
	Base plate, centre, stainless steel	2	106.00.46	
20	Stud bolts	2	106.00.27	
21	Power end/drive	1		
22	Ball bearing	1	106.00.28	
23	Ball bearing	1	106.00.29	
24	Ball bearing	4	106.00.30	
25	Rotor washer	1	106.00.31	
26	Seal	1	106.00.32	
27	Seal	4	106.00.33	
28	Lifting lug	1	106.00.40	
29	Discharge screw	3	107.00.41	

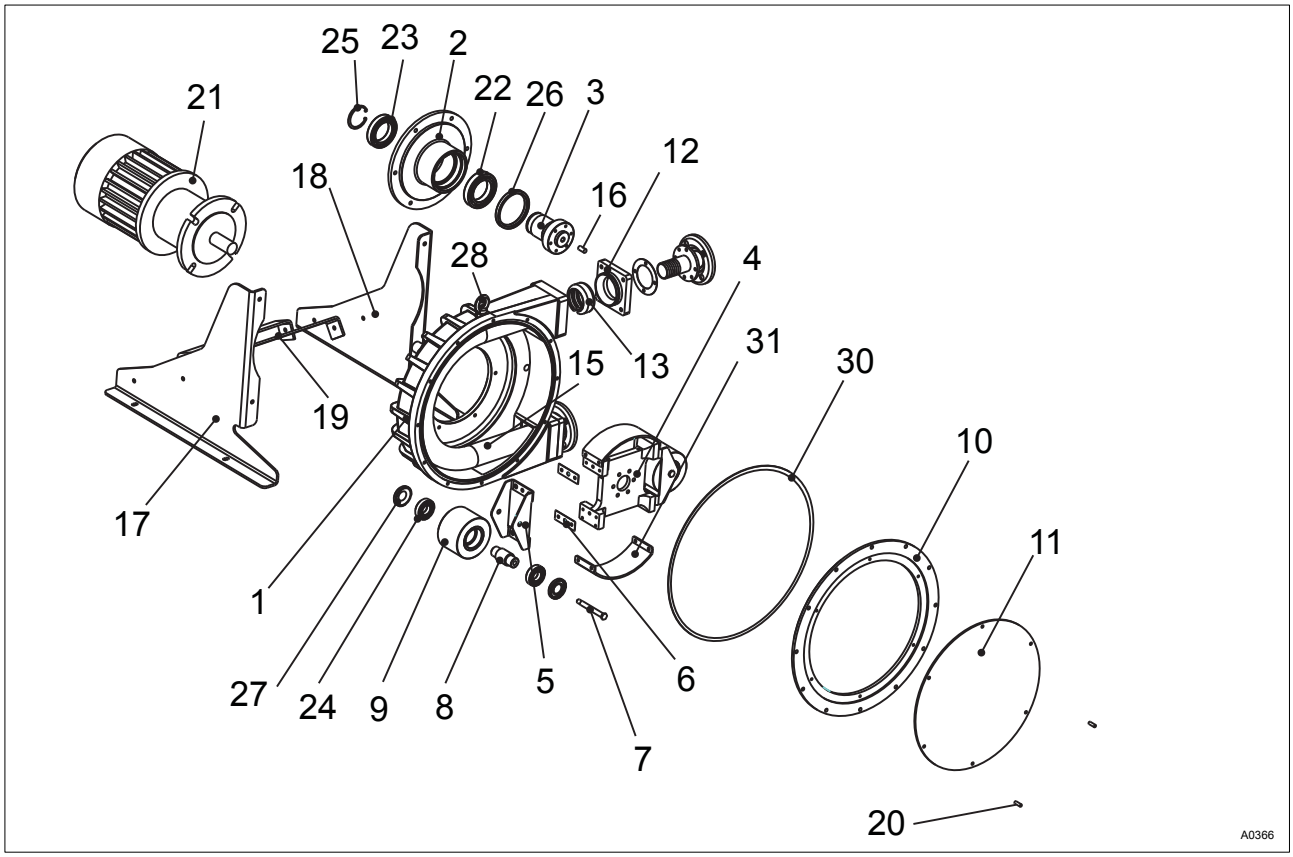

Fig. 11: Exploded view of spare parts for DFCa 050

DFCa 050 see Fig. 11				
Item	**Description**	**Quantity**	**Reference**	**Part number**
1	Pump housing	1	108.01.01	
2	Ball bearing housing	1	108.00.02	
3	Rotor shaft	1	108.00.03	
4	Rotor	1	108.01.04	
5	Roller holder	2	108.01.05	
6	Spacer plate		108.00.06	
7	Headless screw	2	108.00.07	
8	Roller shaft	2	108.00.08	
9	Roller	2	108.01.09	
10	Metal cover	1	108.00.10	
11	Front cover (polycarbonate)	1	108.00.39	
12	Pressure flange, standard	2	108.00.11	
13	Press ring	2	108.00.12	
14	Connector VA DN40	2	108.00.13	
	Connector ANSI DN40 VA	2	108.00.14	

DFCa 050 see Fig. 11				
Item	**Description**	**Quantity**	**Reference**	**Part number**
	Connector PP DN40	2	108.00.16	
	Connector ANSI PP DN40	2	108.00.17	
	Connector PVDF DN40	2	108.00.18	
	Connector ANSI PVDF DN40	2	108.00.19	
	Connector DIN 11851 NW50	2	108.00.15	
	Connector TRI-CLAMP	2	108.00.40	
15	Pump hose NR	1	108.00.20	1037199
	Pump hose NR-A	1	108.00.21	1037203
	Pump hose NBR	1	108.00.22	1037201
	Pump hose NBR-A	1	108.00.23	1037204
	Pump hose EPDM	1	108.00.24	1037202
	Pump hose NORPRENE®	1	108.00.45	1045084
16	Cap	1	104.01.23	
17	Base plate, left	1	108.00.26	
	Base plate, left, stainless steel	1	108.00.36	
18	Base plate, right	1	108.00.27	
	Base plate, right, stainless steel	1	108.00.37	
19	Base plate, centre	2	108.00.28	
	Base plate, centre, stainless steel	2	108.00.38	
20	Stud bolts	2	102.00.14	
21	Power end/drive	1		
22	Ball bearing	1	108.00.29	
23	Ball bearing	1	108.00.30	
24	Ball bearing	4	108.00.31	
25	Rotor washer	1	108.00.32	
26	Seal	1	108.00.33	
27	Seal	4	108.00.34	
28	Lifting lug	1	106.00.40	
29	Discharge screw	3	107.00.41	
30	O-ring, front cover	1	108.00.35	
31	Adapter, rotor	2	108.01.44	

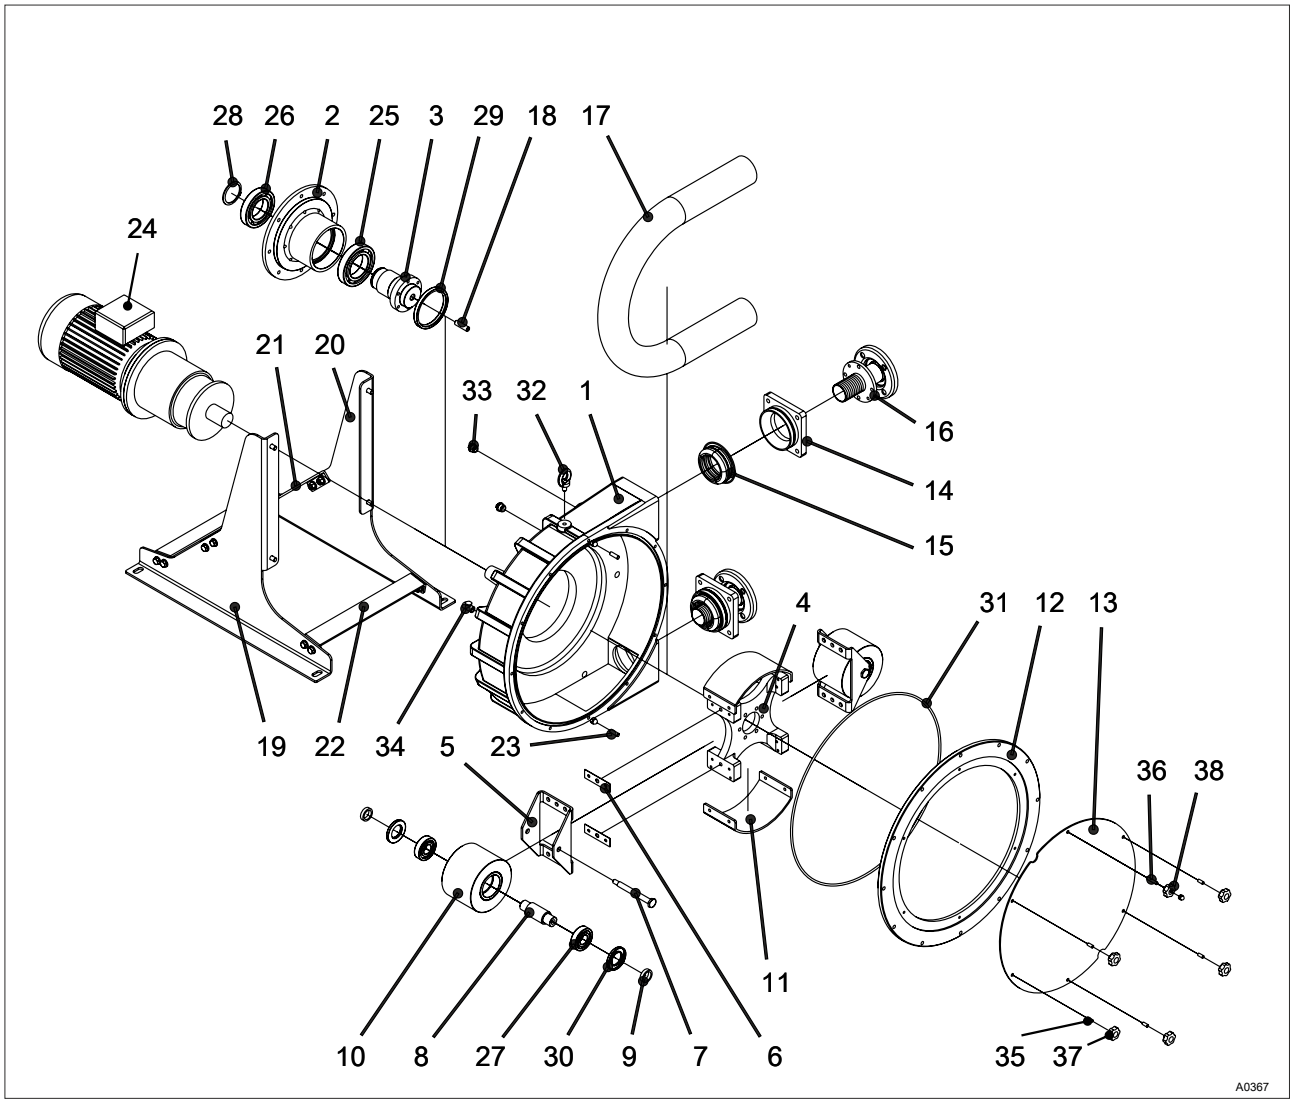

Fig. 12: Exploded view of spare parts for DFCa 060

DFCa 060 see Fig. 12				
Item	**Description**	**Quantity**	**Reference**	**Part number**
1	Pump housing	1	110.01.01	
2	Ball bearing housing	1	110.00.03	
3	Rotor shaft	1	110.00.04	
4	Rotor	1	110.01.05	
5	Roller holder	2	110.01.06	
6	Spacer plate 1 mm		110.00.07	
	Spacer plate 7 mm		110.00.55	
	Spacer plate 5 mm		110.00.56	
7	Headless screw	2	110.00.08	
8	Roller shaft	2	110.00.09	
9	Additional spacer	4	110.00.10	

DFCa 060 see Fig. 12				
Item	**Description**	**Quantity**	**Reference**	**Part number**
10	Roller	2	110.01.11	
11	Adapter, rotor	2	110.01.12	
12	Front cover	1	110.00.13	
13	Front cover, polycarbonate	1	110.00.14	
14	Pressure flange, standard	2	110.01.15	
15	Clamp ring	2	110.01.16	
16	Connector DIN, flange, DN50, VA	2	110.01.17	
	Connector ANSI, flange, VA, 2"	2	110.01.41	
	Connector TRI-CLAMP 2", VA	2	110.01.42	
	Connector DIN 11851, DN50, VA	2	110.01.43	
	Connector DIN, flange, PP, DN50	2	110.01.64	
	Connector ANSI, flange, PP, DN50	2	110.01.63	
	Connector DIN, flange, PVDF/PTFE, DN50	2	110.01.72	
	Connector ANSI, flange, PVDF/PTFE, DN50	2	110.01.65	
17	Pump hose NR	1	110.00.18	1037206
	Pump hose NR-A	1	110.00.19	1037210
	Pump hose NBR	1	110.00.20	1037208
	Pump hose NBR-A	1	110.00.21	1037211
	Pump hose EPDM	1	110.00.22	1037209
18	Cap	1	110.00.23	
19	Base plate, left	1	110.00.37	
	Base plate, left, stainless steel	1	110.00.48	
20	Base plate, right	1	110.00.38	
	Base plate, right, stainless steel	1	110.00.49	
21	Base plate centre, 100 mm	2	110.00.39	
	Base plate centre, 100 mm, stainless steel	2	110.00.50	
22	Base plate centre, 60 mm	2	110.00.40	
	Base plate centre, 60 mm, stainless steel	2	110.00.51	
23	Stud bolts	2	106.00.27	
24	Power end/drive	1		
25	Ball bearing	1	110.00.26	
26	Ball bearing	1	110.00.27	
27	Ball bearing	4	110.00.28	

DFCa 060 see Fig. 12				
Item	**Description**	**Quantity**	**Reference**	**Part number**
28	Safety collar	1	110.00.29	
29	Seal	1	110.00.30	
30	Seal	4	110.00.31	
31	O-ring	1	110.00.33	
32	Lifting lug	2	110.00.34	
33	Discharge screw	1	107.00.41	
34	Valves	1	110.00.53	
35	Stud bolts, short	5	107.00.46	
36	Stud bolts, long	1	107.00.47	
37	Knurled nut, blank	5	102.00.26	
38	Knurled nut	1	102.00.25	

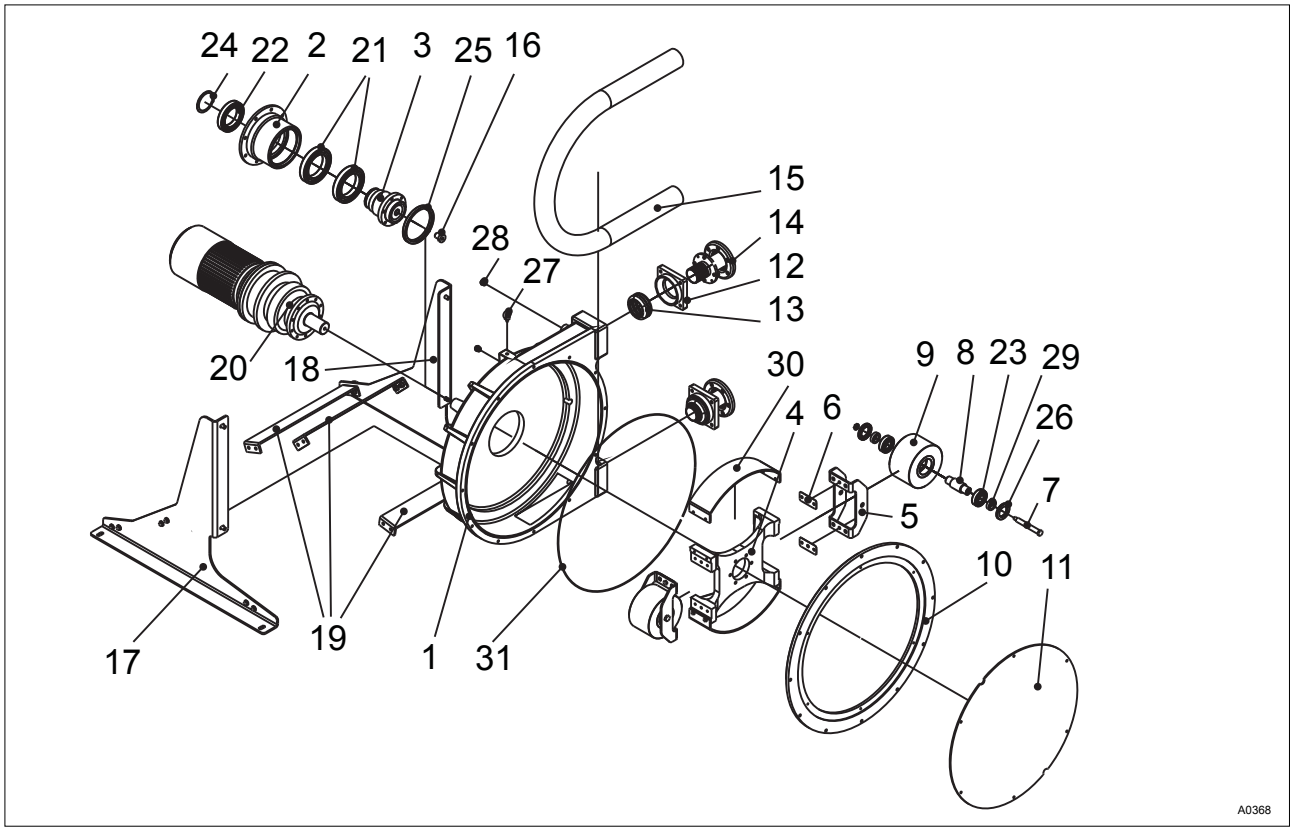

Fig. 13: Exploded view of spare parts for DFCa 070

DFCa 070 see Fig. 13				
Item	**Description**	**Quantity**	**Reference**	**Part number**
1	Pump housing	1	112.00.01	
2	Ball bearing housing	1	111.00.03	

DFCa 070 see Fig. 13				
Item	**Description**	**Quantity**	**Reference**	**Part number**
3	Rotor shaft	1	111.00.04	
4	Rotor	1	112.01.02	
5	Roller holder	2	112.01.03	
6	Spacer plate		112.00.04	
7	Headless screw	2	112.00.05	
8	Roller shaft	2	112.00.06	
9	Roller	2	112.01.07	
10	Front cover	1	112.00.40	
11	Front cover, polycarbonate	1	112.00.41	
12	Pressure flange, standard	2	112.00.09	
13	Press ring	2	112.00.10	
14	Connector DIN VA	2	112.00.11	
	Connector ANSI VA	2	112.00.12	
	Connector DIN 11851 NW65	2	112.00.13	
	Connector DIN PP	2	112.00.14	
	Connector ANSI PP	2	112.00.15	
	Connector DIN PVDF	2	112.00.16	
	Connector ANSI PVDF	2	112.00.17	
	Connector TRI-CLAMP	2	112.00.43	
15	Pump hose NR	1	112.00.18	1037213
	Pump hose NR-A	1	112.00.19	1037216
	Pump hose NBR	1	112.00.20	1037214
	Pump hose NBR-A	1	112.00.21	1037217
	Pump hose EPDM	1	112.00.22	1037215
16	Cap	1	111.00.08	
17	Base plate, left	1	112.00.24	
	Base plate, left, stainless steel	1	112.00.36	
18	Base plate, right	1	112.00.25	
	Base plate, right, stainless steel	1	112.00.37	
19	Base plate, centre	2	112.00.26	
	Base plate, centre, stainless steel	2	112.00.38	
21	Power end/drive	1		
22	Ball bearing	1	111.00.28	
23	Ball bearing	1	111.00.29	
24	Ball bearing	4	112.00.27	
25	Rotor washer	1	111.00.30	

DFCa 070 see Fig. 13				
Item	**Description**	**Quantity**	**Reference**	**Part number**
26	Seal	1	111.00.31	
27	Seal	4	112.00.28	
28	Lifting lug	1	112.00.29	
29	Discharge screw	3	112.00.30	
30	Additional spacer	1	112.00.31	
31	Adapter, rotor	2	112.01.32	
34	O-ring, front cover	1	112.00.35	

Lubricant				
Item	**Description**	**Quantity**	**Reference**	**Part number**
1	0.5 kg silicone grease	1		1037255
2	1.0 kg silicone grease	1		1037256

8 DFCa technical data

Type DFCa	Feed rate in l/U	P max. in bar	Flow rate at max. pressure in l/h	Rollers/ shoes Shoes	Hose interior ⌀ in mm	Solids max. ⌀ in mm	Weight without drive in kg	Con-nector
030	0.43	8	700	Rollers	28	7.0	62	1 1/4"
040	0.81	8	1550	Rollers	35	8.8	89	1 1/2"
050	1.46	8	2400	Rollers	40	10.0	140	DN 40
060	3.12	8	6000	Rollers	55	13.8	235	DN 50
070	8.05	8	12000	Rollers	65	16.3	440	DN 65
70D	15.83	4	25000	Rollers	65	16.3	850	DN 80

8.1 Dimensions DFCa 030

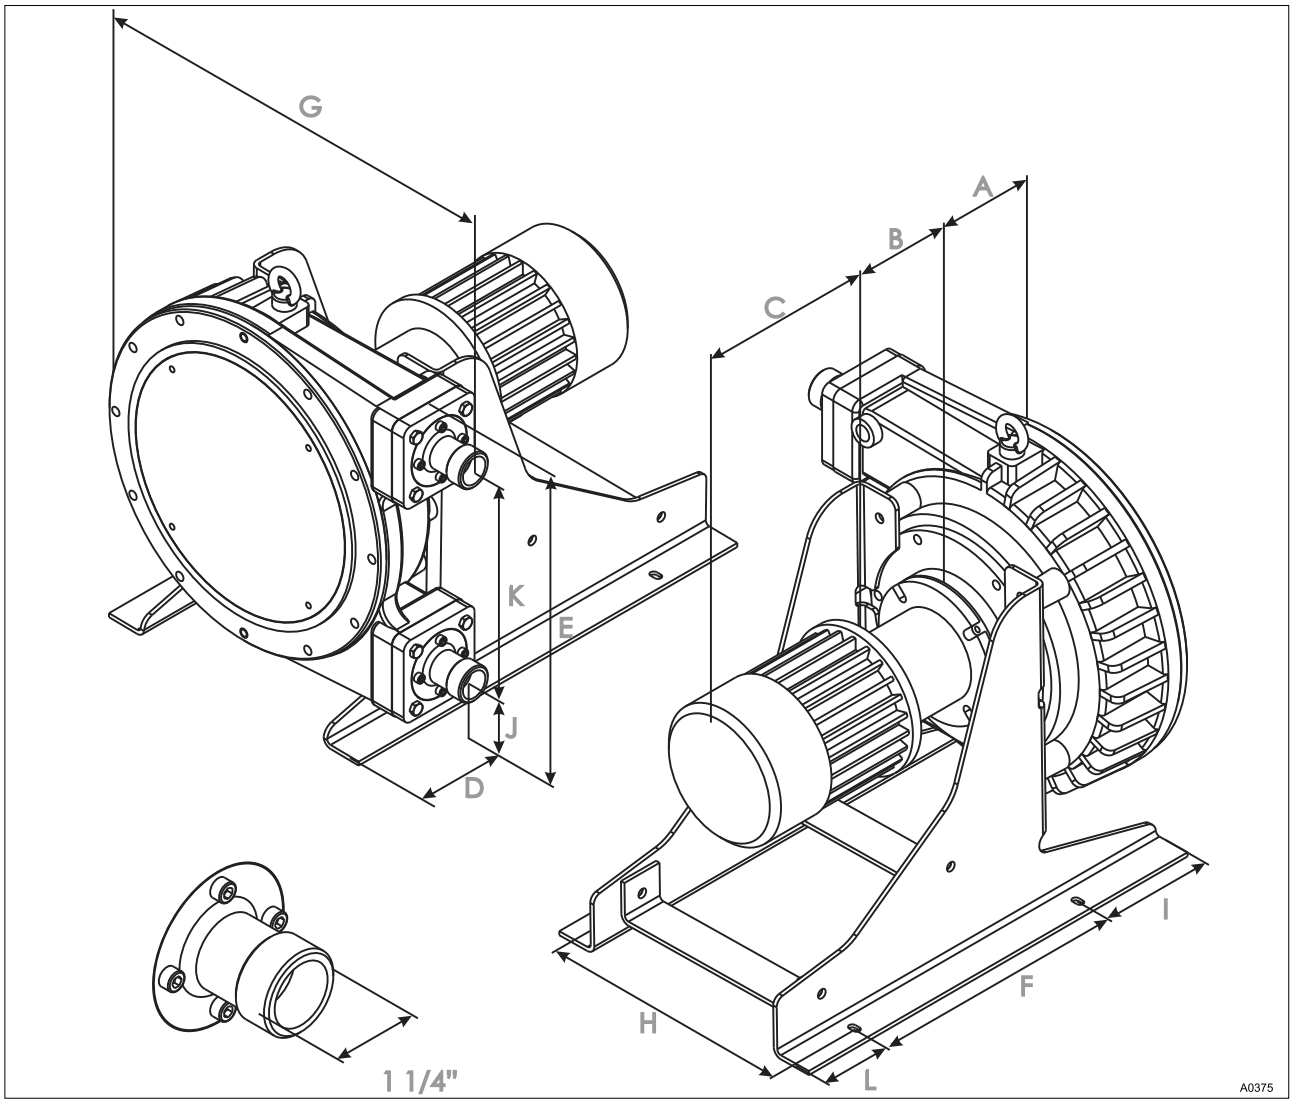

Fig. 14: Dimensions DFCa 030

A 127.5 mm
B *
C *
D 60 mm
E 425 mm
F 305 mm

G 471 mm
H 305 mm
I 160 mm
J 100 mm
K 262 mm
L 75 mm
M 1 1/4"
* Dependent on selected drive

8.2 Dimensions DFCa 040

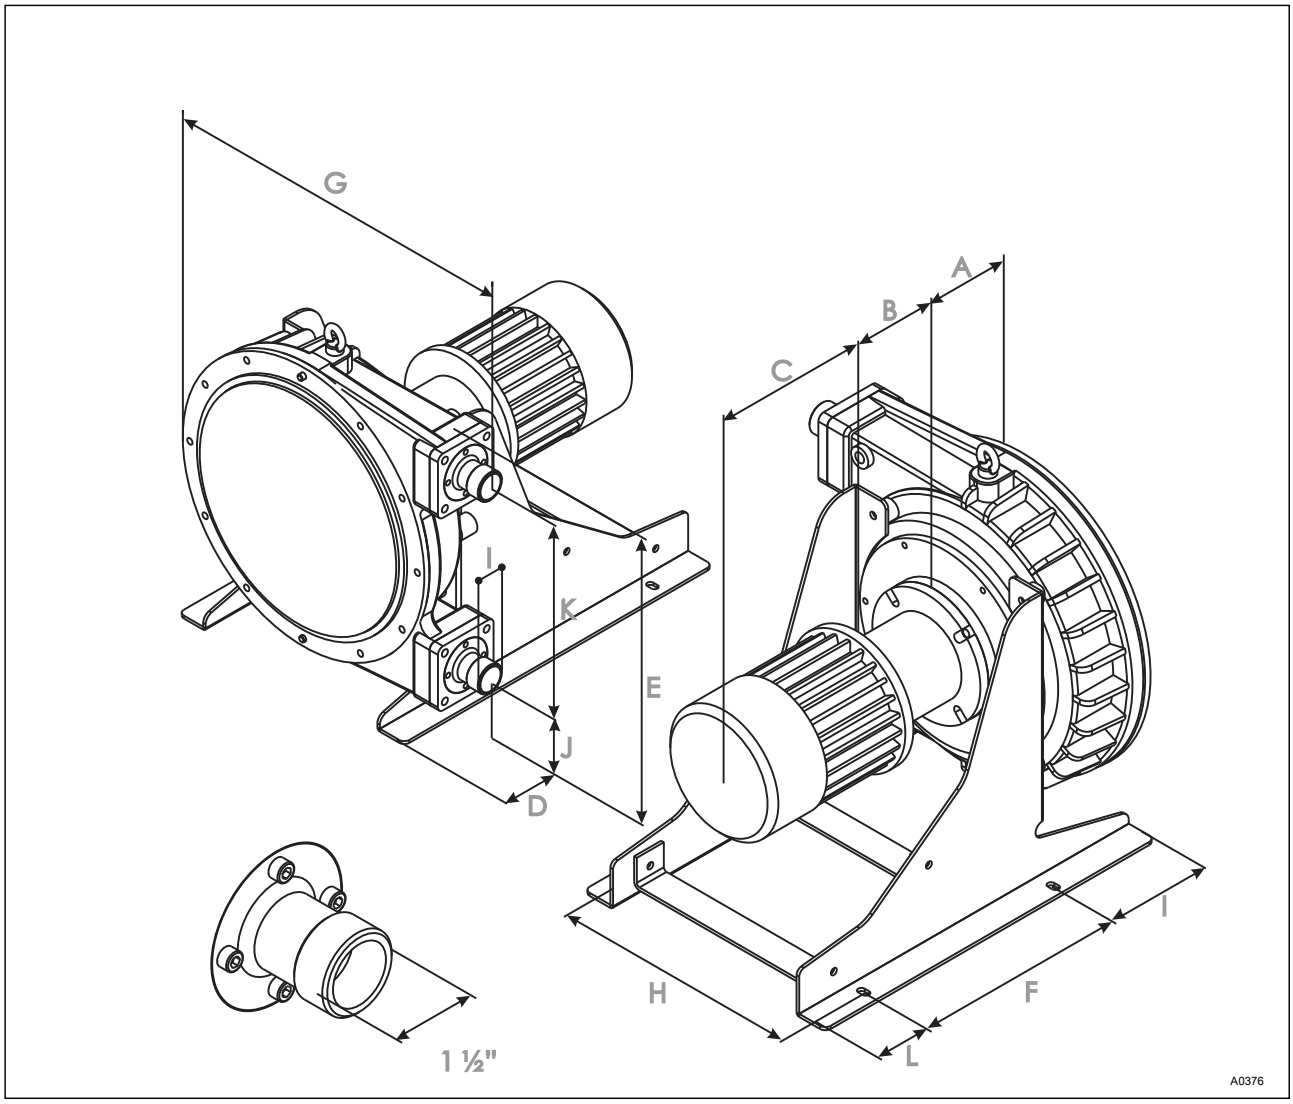

Fig. 15: Dimensions DFCa 040

A 135 mm
B *
C *
D 70 mm
E 613 mm
F 345 mm
G 552 mm
H 385 mm
I 170 mm
J 130 mm
K 330 mm
L 95 mm
M 1 1/2"
* Dependent on selected drive

8.3 Dimensions DFCa 050

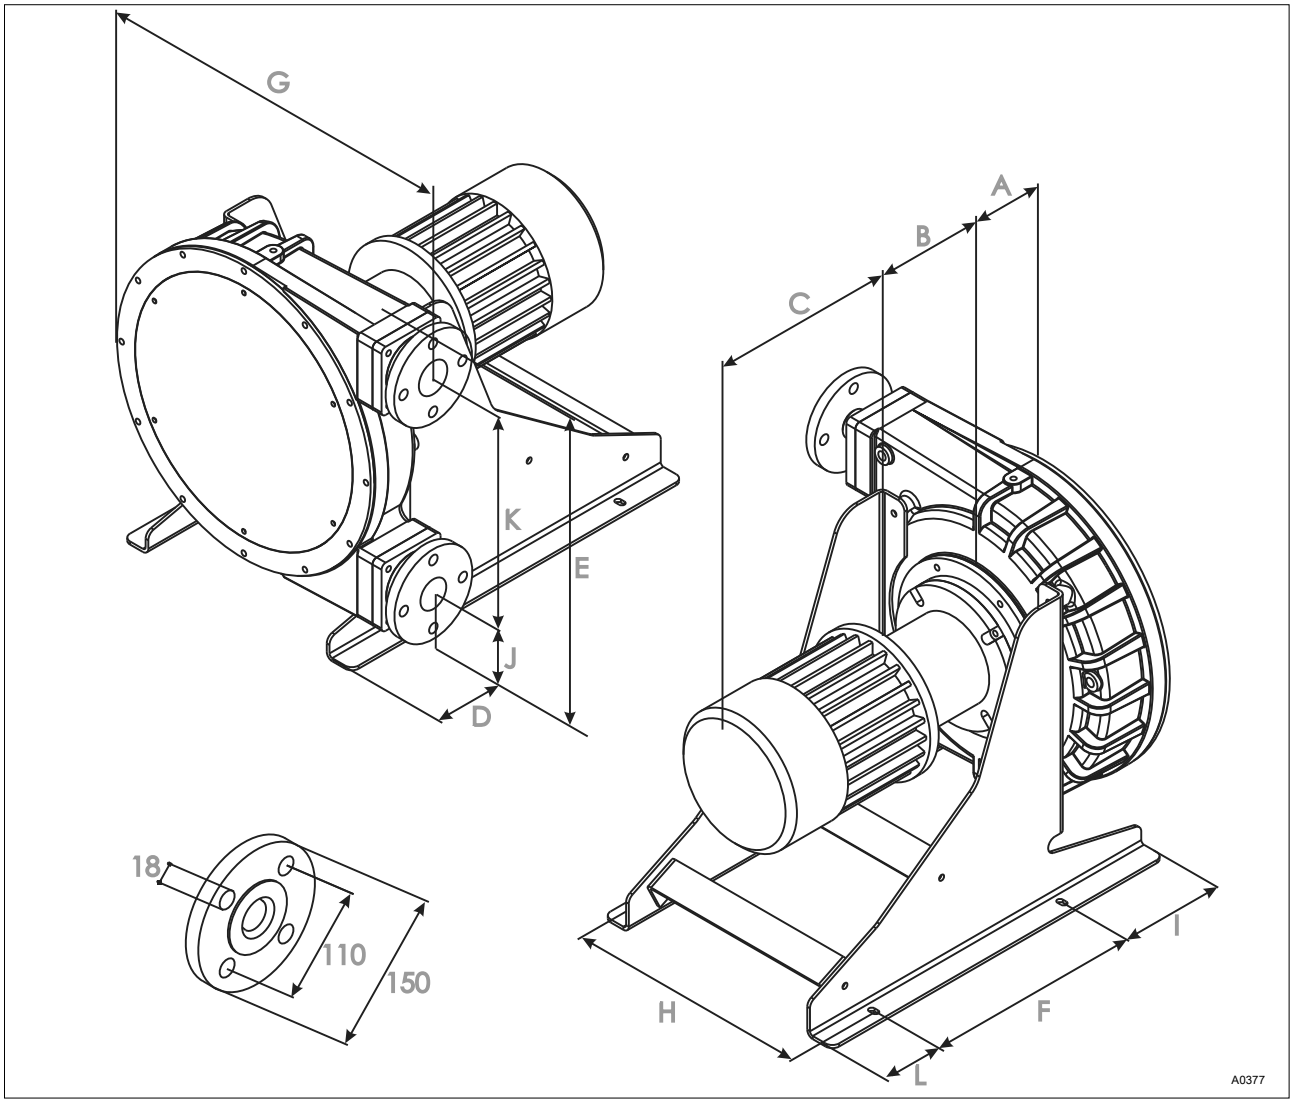

Fig. 16: Dimensions DFCa 050

A 151 mm
B *
C *
D 79 mm
E 645 mm
F 415 mm
G 633 mm
H 453 mm
I 200 mm
J 159 mm
K 412 mm
L 115 mm
* Dependent on selected drive

8.4 Dimensions DFCa 060

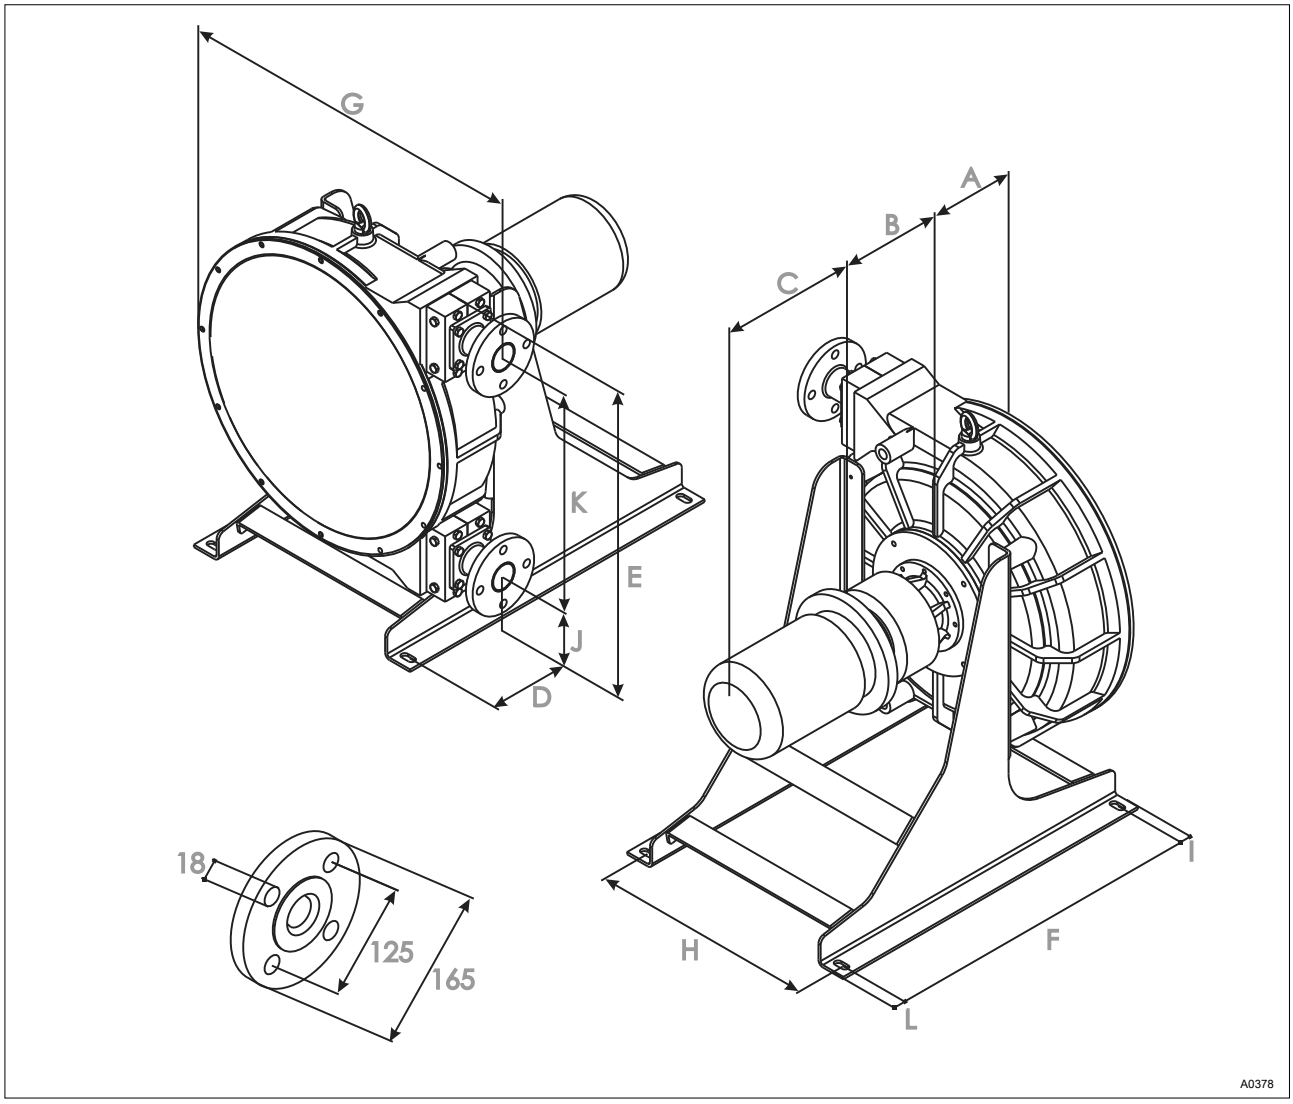

Fig. 17: Dimensions DFCa 060

A 215 mm
B *
C *
D 111 mm
E 805 mm
F 740 mm
G 735 mm
H 500 mm
I 25 mm
J 210 mm
K 510 mm
L 25 mm
* Dependent on selected drive

8.5 Dimensions DFCa 070

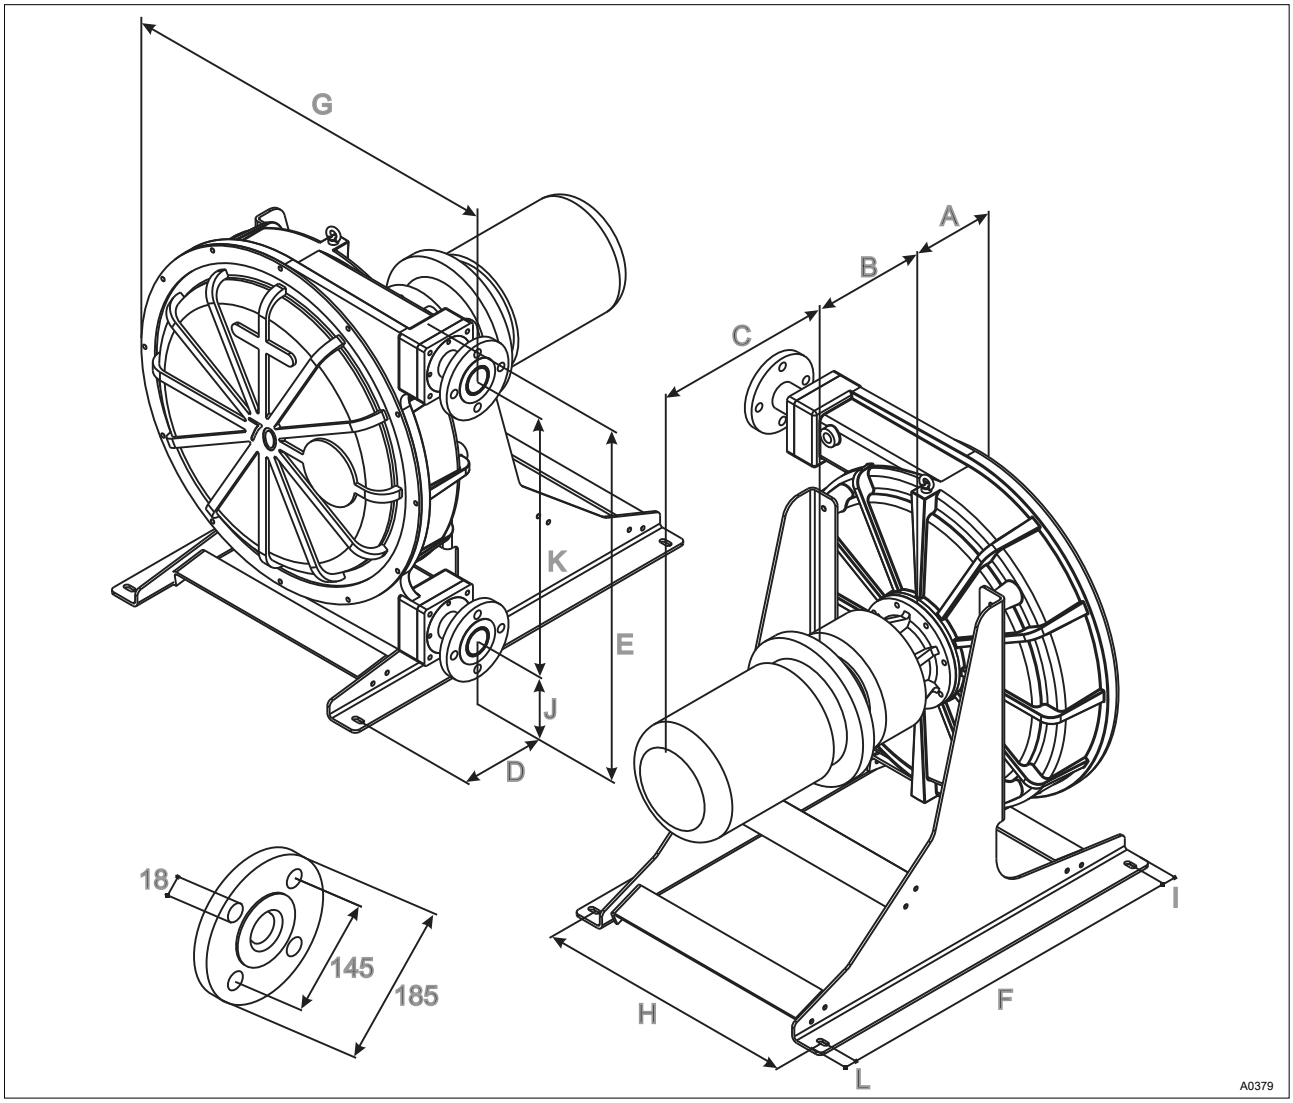

Fig. 18: Dimensions DFCa 070

A 215 mm
B *
C *
D 250 mm
E 1124 mm
F 1065 mm
G 1100 mm
H 790 mm
I 40 mm
J 240 mm
K 784 mm
L 40 mm
* Dependent on selected drive

9 DFCa technical appendices

9.1 EC Declaration of Conformity for Machinery

In accordance with DIRECTIVE 2006/42/EC OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL, Appendix I, BASIC HEALTH AND SAFETY REQUIREMENTS, section 1.7.4.2. C.

We,

- ProMinent GmbH
- Im Schuhmachergewann 5 - 11
- D - 69123 Heidelberg,

hereby declare that the product specified in the following, complies with the relevant basic health and safety requirements of the EC Directive, on the basis of its functional concept and design and in the version distributed by us. Any modification to the product not approved by us will invalidate this declaration.

Extract from the EC Declaration of Conformity

Designation of the product:	Peristaltic pump, DULCOflex
Product type:	DFAa ..., DFBa ..., DFCa ..., DFDa ...,
Serial number:	see nameplate on the unit
Relevant EC directives:	EC Machinery Directive (2006/42/EC) EC EMC Directive (2004/108/EC) Compliance with the protection targets of the Low Voltage Directive 2006/95/EC according to Appendix I, No. 1.5.1 of the Machinery Directive 2006/42/EC
Harmonised standards applied, in particular:	EN 809 EN ISO 12100-1 EN ISO 12100-2 EN 60204-1 EN 60034-1 EN 60034-5 EN 60034-7 EN 61000-6-1 EN 61000-6-2
Date:	16.03.2010

The EC Declaration of Conformity is available to download on our homepage.

10 Index

A

Action, step by step 2
Applied harmonised standards 52

B

Backflowing medium 25

C

CE 52
Correct and proper use 18
Counter measures 18

D

Declaration of Conformity 52
Designation of the product 52
Displacement pump 20
Disposal 35

E

Emergency stop switch 17

F

Functional principle 21

G

General non-discriminatory approach 2

L

Links to elements or sections of these instructions or other applicable documents 2
Live parts 17

M

More symbols 2

N

Non-discriminatory approach 2

R

Relevant EC directives 52
Rollers 25

S

Safety data sheet 18
Safety information 4, 17
Serial number 52
Spacer plates 25
Squeezing the hose 25

U

Unauthorised access 17
Users' qualifications 5

ProMinent GmbH
Im Schuhmachergewann 5 - 11
69123 Heidelberg
Telephone: +49 6221 842-0
Fax: +49 6221 842-419
Email: info@prominent.com
Internet: www.prominent.com

986227, 3, en_GB

© 2015